

A Assembly Instructions Little Eagles Nest-Prairie Art. 4634-10



Operator: _____

Location: _____

Revision history

Revision 1 – 2006-03-14

The first allowed version

Assembly instructions JF

Revision 5 – 2011-02-18 C25/30 FH

All rights reserved

© Copyright 2010 Huck Seiltechnik GmbH

Contents

A	Assembly instructions Little Eagles Nest-Prairie Art. 4634-10	1
1	Introduction Assembling	4
2	Datasheet Little Eagles Nest-Prairie Art. 4634-10	6
3	Delivery contents (parts list with part numbers)	9
4	Erection instructions	13
5	Post installation checks	20
B	Maintenance instructions Little Eagles Nest-Prairie	17
6	Introduction Maintenance	19
7	General maintenance information	20
8	Maintenance timetable	22
9	Monthly maintenance	23
10	Quarterly maintenance	23
11	Half yearly maintenance	23
12	Annual maintenance	25
13	Maintenance printout	26
14	Hand over document	28

List of Tables

Table 3-1: Delivery contents, in words	9
Table 3-2: Delivery contents, in symbols	10

1 Introduction Assembling

1.1 General information

This equipment should be installed, inspected, maintained and operated in accordance with EN1176-7 guidelines.

Before installation work commences, please check that you have all of the equipment and fixation components in the parts list provided (see Tables 3-1 and 3-2).

Please consider that the installation has to be carried out only on even terrain (max.slope up to 3%).

Any spare parts that may be required can be obtained directly from your supplier.

Please do not hesitate to call your supplier if you have any problems during installation or in case of any other questions.



Attention

Following installation, complete assembly instructions, maintenance instructions and a maintenance record must be sent to the operator who must confirm receipt in writing. See the last page of this document.



Attention

All nuts and bolts are hot-dip galvanised or stainless steel. One of the characteristics of stainless steel is that uncontrolled cold welding may occur when the nuts are tightened. To prevent this, it is necessary to spray the nuts and bolts with Teflon spray or another similar lubricant.

We hereby confirm that this play equipment has been tested and certified in accordance with the play equipment standard EN 1176.

Drawings / Views

All optical drawings are showing only the measurements/dimensions and are no mandatory technical views of the complete item.

We reserve the right to change technical details of our articles which are serving for the further development of our articles and are reasonable for the customer.

Measurement tolerances

Because of the properties and characteristics of the components, minor measurement tolerances compared to the indication on the sketches are possible.

This concerns all shown measurements except the foundation measurements resp. measurements below upper edge ground level/play area.

2 Datasheet: Little Eagles Nest-Prairie, Art. 4634-10

1. Space requirement: 11.40 m x 4.80 m and/or 14.60 m x 7.80 m including safety zone, height of fall 2.0 m

The Images (individual drawings) are not to scale !!

2. Required safety surface:

Surface material	Description mm	Minimum thickness of layer mm	Maximum height of fall mm
Topsoil grass			$\leq 1000^d$
Chipped bark	20 – 80 grain size	300/400	$\leq 2000/3000$
Wood chippings	5 – 30 grain size	300/400	$\leq 2000/3000$
Sand ^c	0.2 – 2 grain size	300/400	$\leq 2000/3000$
Gravel ^c	2 – 8 grain size	300/400	$\leq 2000/3000$
Other ground materials	As recommended by manufacturer		Critical fall height as checked

^a Appropriate ground material, prepared for use at playgrounds

^b In case of loose fill material, 100mm have to be added onto the minimum layer thickness to compensate the falling away effect (see 4.2.8.5.1).

^c Without silty or clayey proportions. Grain size can be determined by a sieve test according to EN 933-1.

^d See note 1 in 4.2.8.5.2.

3. Name and overall dimension of the largest component:
Wood post (1pieces) length 4.80 m, \varnothing 200 mm
4. Name and weight of the heaviest component:
Wood posts (1 pallet), approx. 430 kg
5. Intended age group: 6 years and over
6. **Please note that this equipment is set in concrete.**
Concrete: C25/30
Required concrete: 2.3 m³
Foundations/area to be excavated:
1 x 1.30 m long x 1.30 m wide, total depth 1.10 m including 10 cm drainage
4 x 0.60 m long x 0.60 m wide, total depth 1.10 m including 10 cm drainage
2 x 0.60 m long x 0.40 m wide, total depth 0.90 m including 10 cm drainage
1 x 1.00 m long x 0.40 m wide, total depth 0.90 m including 10 cm drainage
1 x 0.80 m long x 0.40 m wide, total depth 0.50 m including 10 cm drainage
Special required tools: A Backhoe or Cherry Picker with a lifting height of at least 5.0m !



Round off foundation edges (min.R = 100 mm)! Sizes of foundations are “4-5” (natural ground).


Soil class 4: soft to medium plasticity, interleave bound, with minor portion of stone (portion < 30% with bigger diameter of 63 mm grain size).

Soil class 5 : ground with soil class 3 and 4 with big portion of stones (portion > 30% with bigger diameter of 63 mm grain size).

In case of sandy and soft soils, the surface measure of foundations have to be enlarged for about 50%!


7. Assembly time, once foundations completed: 8 hours.
Required assistants: 3-5 persons.
8. Any spare parts which may be required can be obtained directly from your supplier.
9. **We hereby confirm that this item of play equipment has been tested and certified in accordance with the play equipment standard EN 1176.**

Because of the natural characteristics of wood it is normal that shrinking and swelling occur due to heat and moisture. For example a wood post with a \varnothing of 180mm can vary between 173mm and 183mm. In occurrence it is necessary that bolts and screws be retightened and eventually shortened!

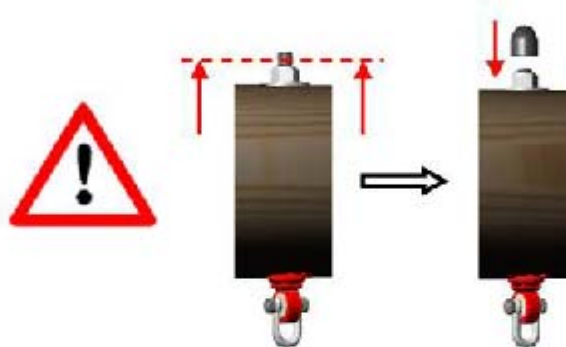

Securing bolts and nuts !

All bolts, nuts, cylinder nuts, etc. (except for Nyloc nuts) must be secured with at least 5 drops of Loctite!

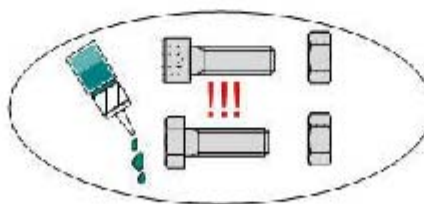

3 Delivery contents (parts list with part numbers)






 
3.1 In words


 

 







 
Table 3-1: Delivery contents, in words

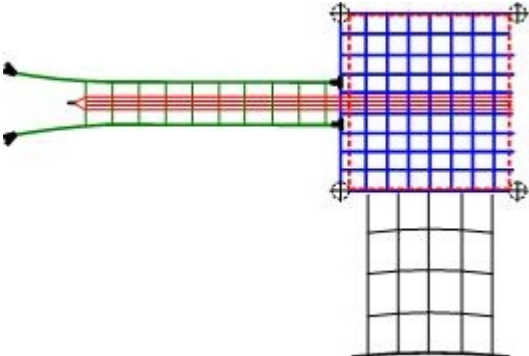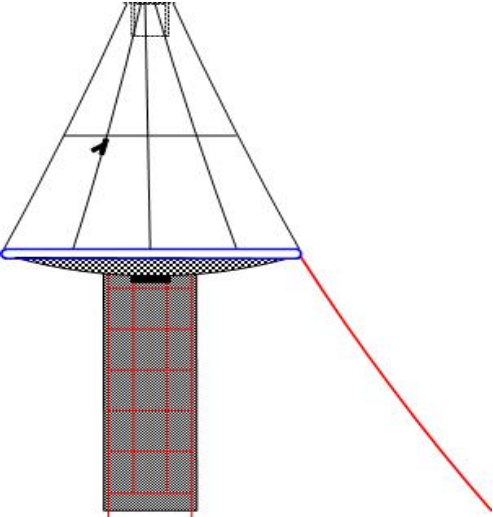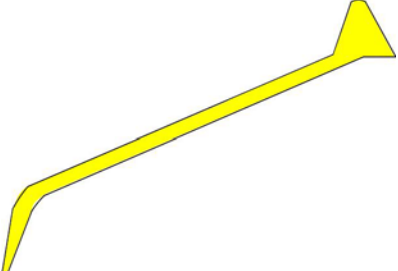

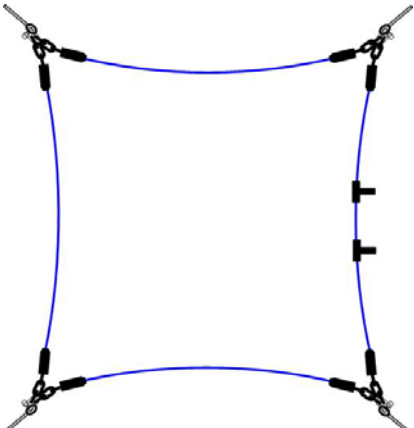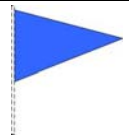






 
Pos.	Quantity	Element / Description	Size	O.K	Missing
1	1	Douglas Fir post	4.80 m long, Ø 20 cm		
2	4	Oak posts	3.50 m long, Ø 16 cm		
3	1	Main nets			
4		Nest ring with 3 components	Ø 1.90m		
5	1	Slide			
6	1	Slide crossbar			
7	1	Hand railing			
100	1	Mast cap			
101	1	Mast cap flag			
102	4	Oak post caps			
103	12	Wood screws	5 x 30mm		
104	2	Cylinder bolts	M12 x 70mm		
107	1	Net cap prefitted on Pos. 4			
108	16	Wood screws	8 x 80mm		
109	8	Carriage bolts with washers	M8 x 60mm		
111	22	Blue/Yellow nut caps	For M12		
113	40	Torx screws	4 x 25mm		
115	2	Loctite			
116	6	Anker chains	7mm Ø x 1.30m		
117	6	Turnbuckles	M12		
118	6	Ground pegs			
119	6	Bow shackle	M10 galvan.		
122	2	Cylinder bolts+Washer+Nyloc nut	M6 x 35mm		
123	4	Steel safety brackets			
124	8	Nut	M12		
125	4	Threaded bolt	M12 x 500mm		
126	8	Carriage bolts	M12 x 185mm		
129	1Ltr.	Wood Varnish			

3.2 In symbols


Table 3-2: Delivery contents, in symbols


Pos.	Quantity	Symbol
1	1	 <p>4,80 m long, Ø 20 cm</p>
2	4	 <p>3.50 m long, Ø 16 cm</p>
3	1	
4	1	
5	1	
6	1	


Pos.	Quantity	Symbol
7	1	
100	1	
101	1	
102	4	
103	12	 5 x 30mm
104	2	 M12 x 70mm
107	1	
108	16	 8 x 80mm
109	8	 M8 x 60mm
111	22	 for M12
113	40	 4 x 25mm
115	2	 Loctite


Pos.	Quantity	Symbol
116	6	 7mm Ø x 1.30m
117	6	 M12
118	6	
119	6	
122	2	
123	4	
124	8	
125	4	 M12 x 500mm
126	8	 M12 x 185mm
129	1	 Wood Varnish


4 Erection Instructions

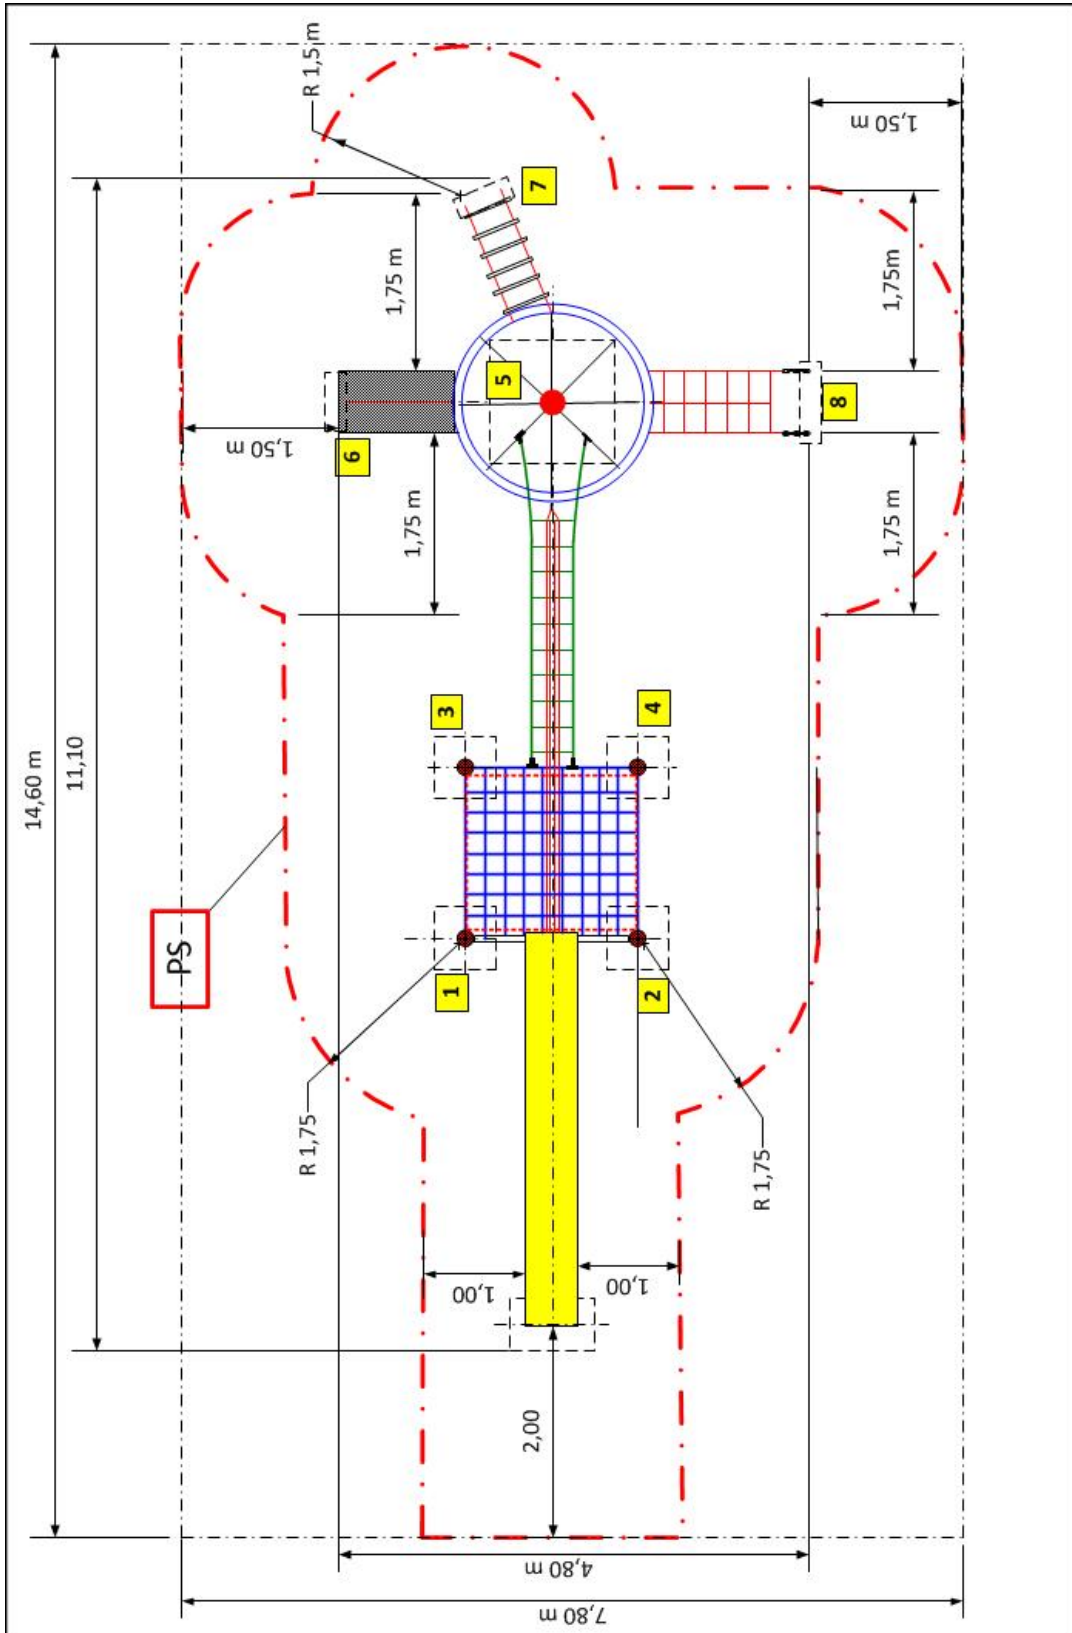


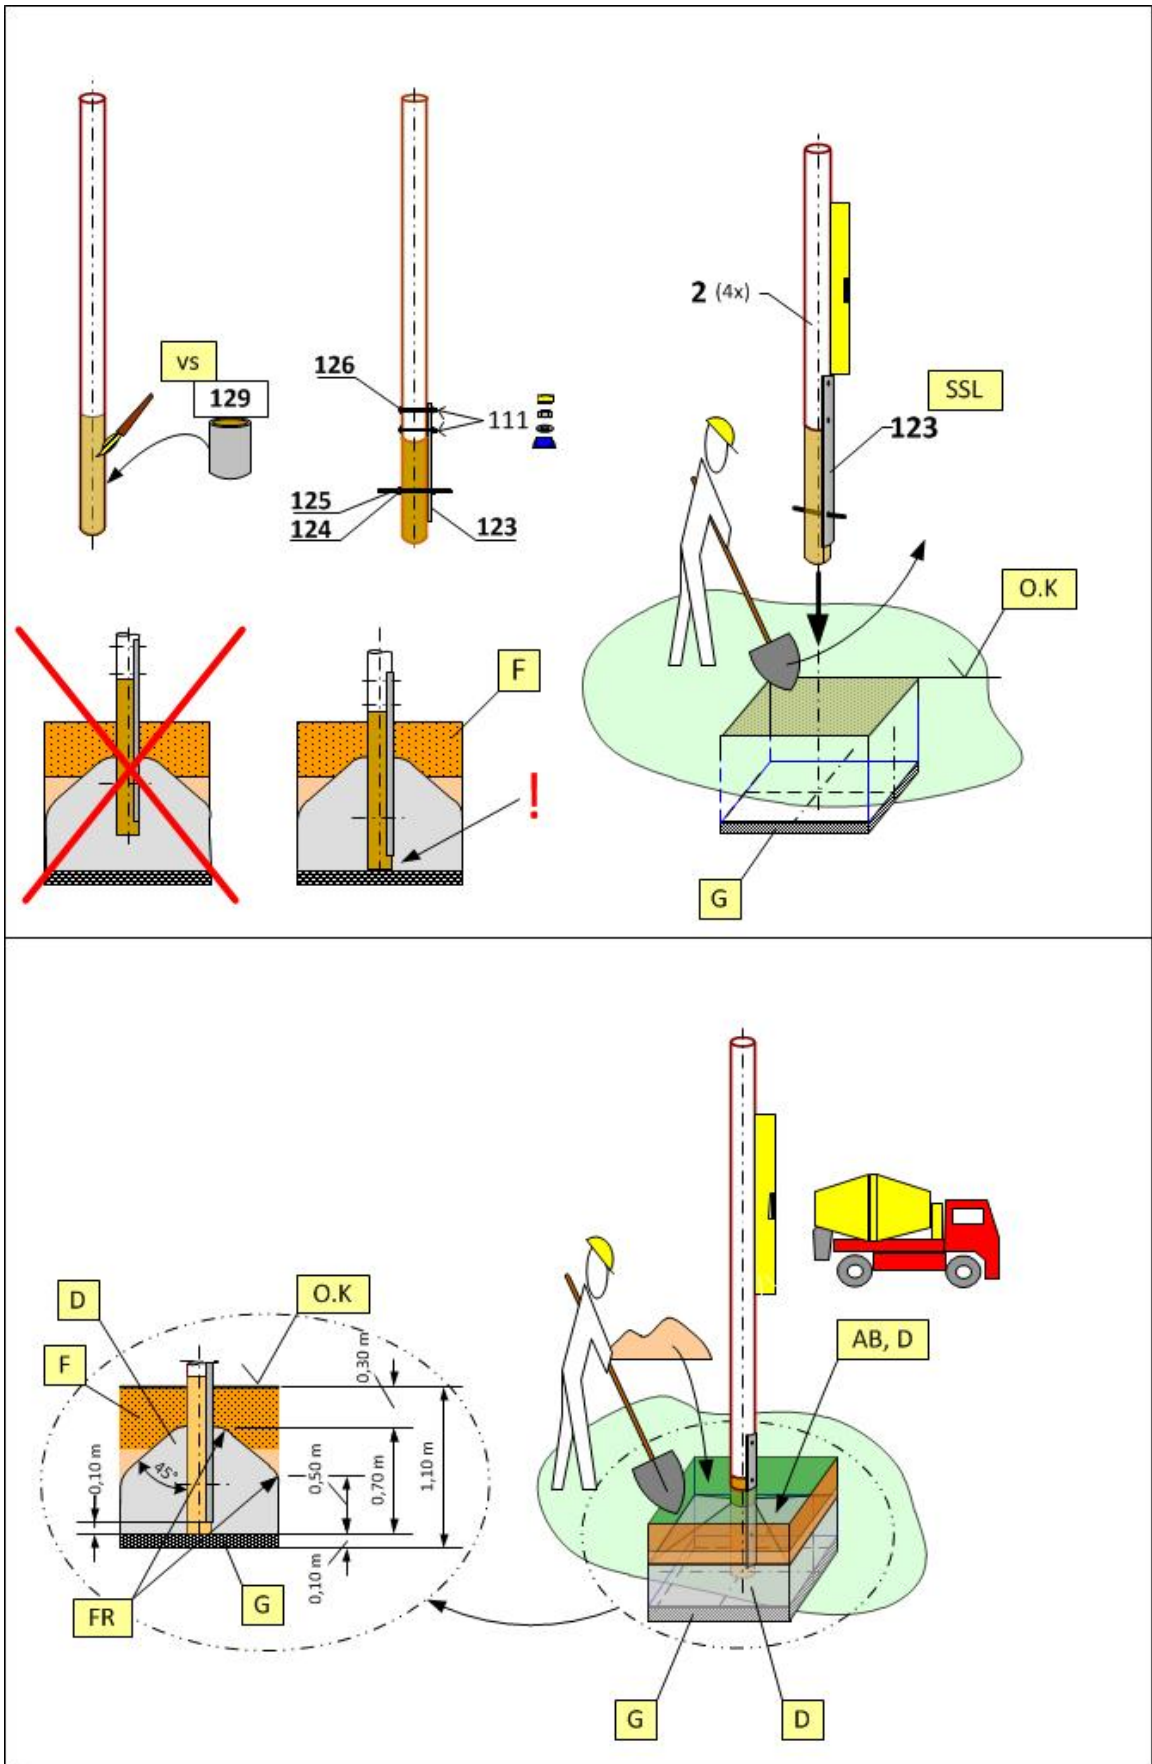

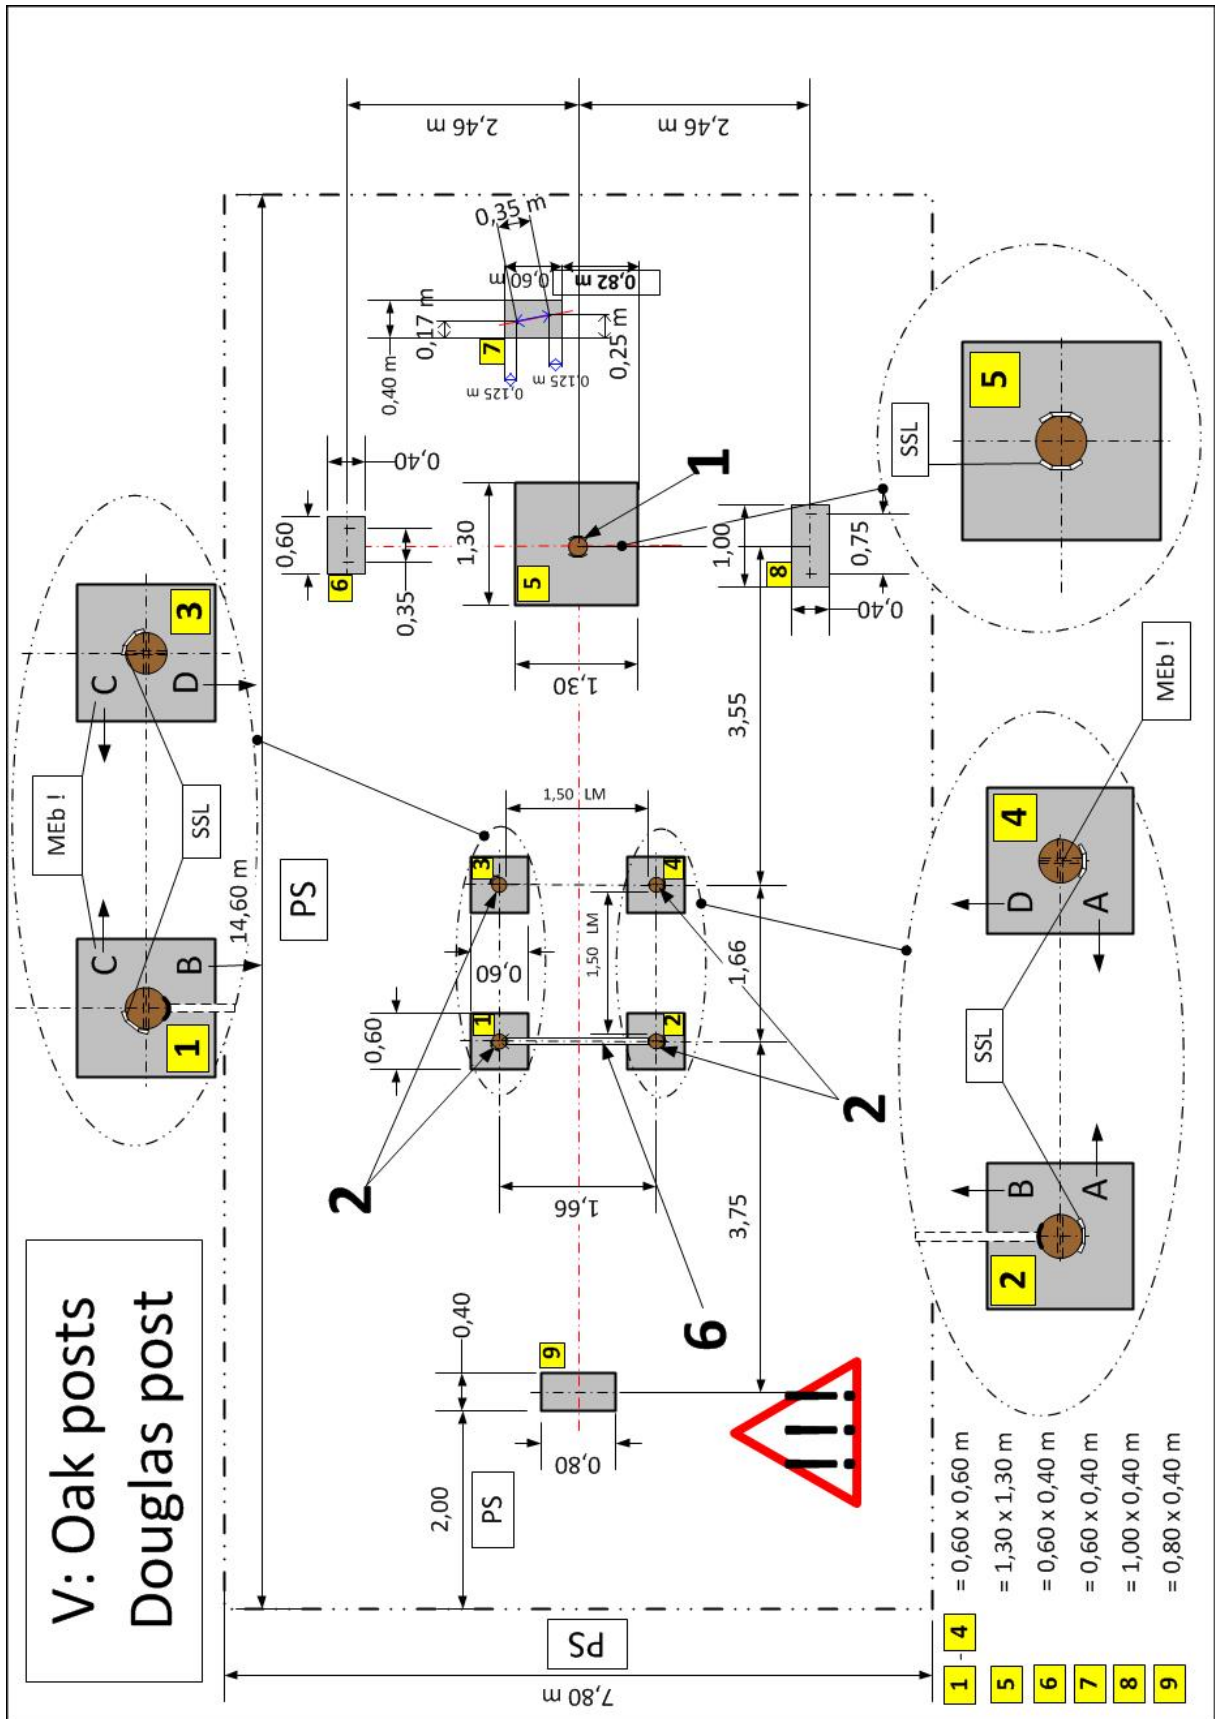

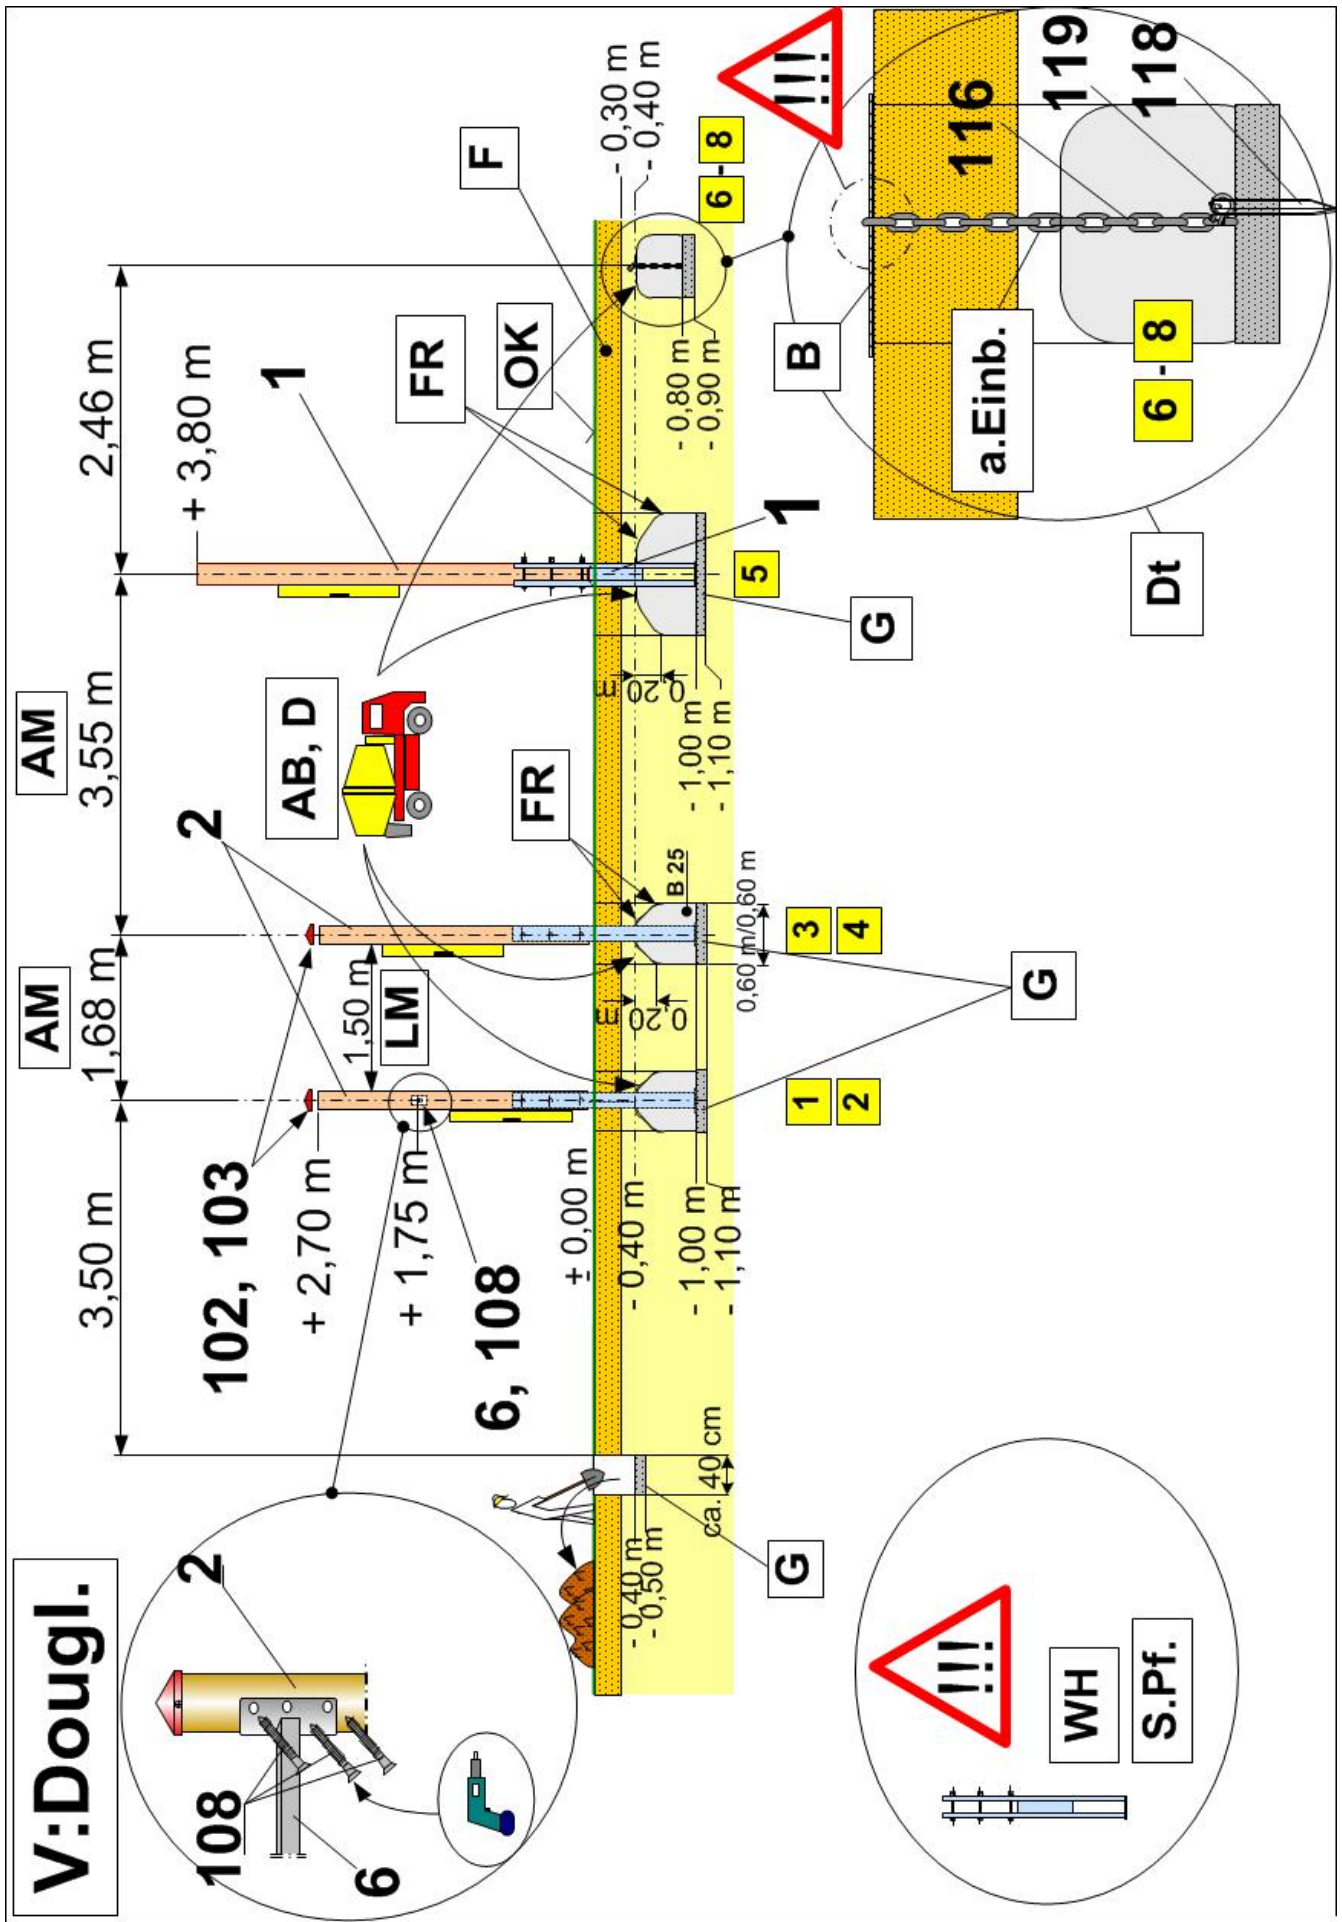

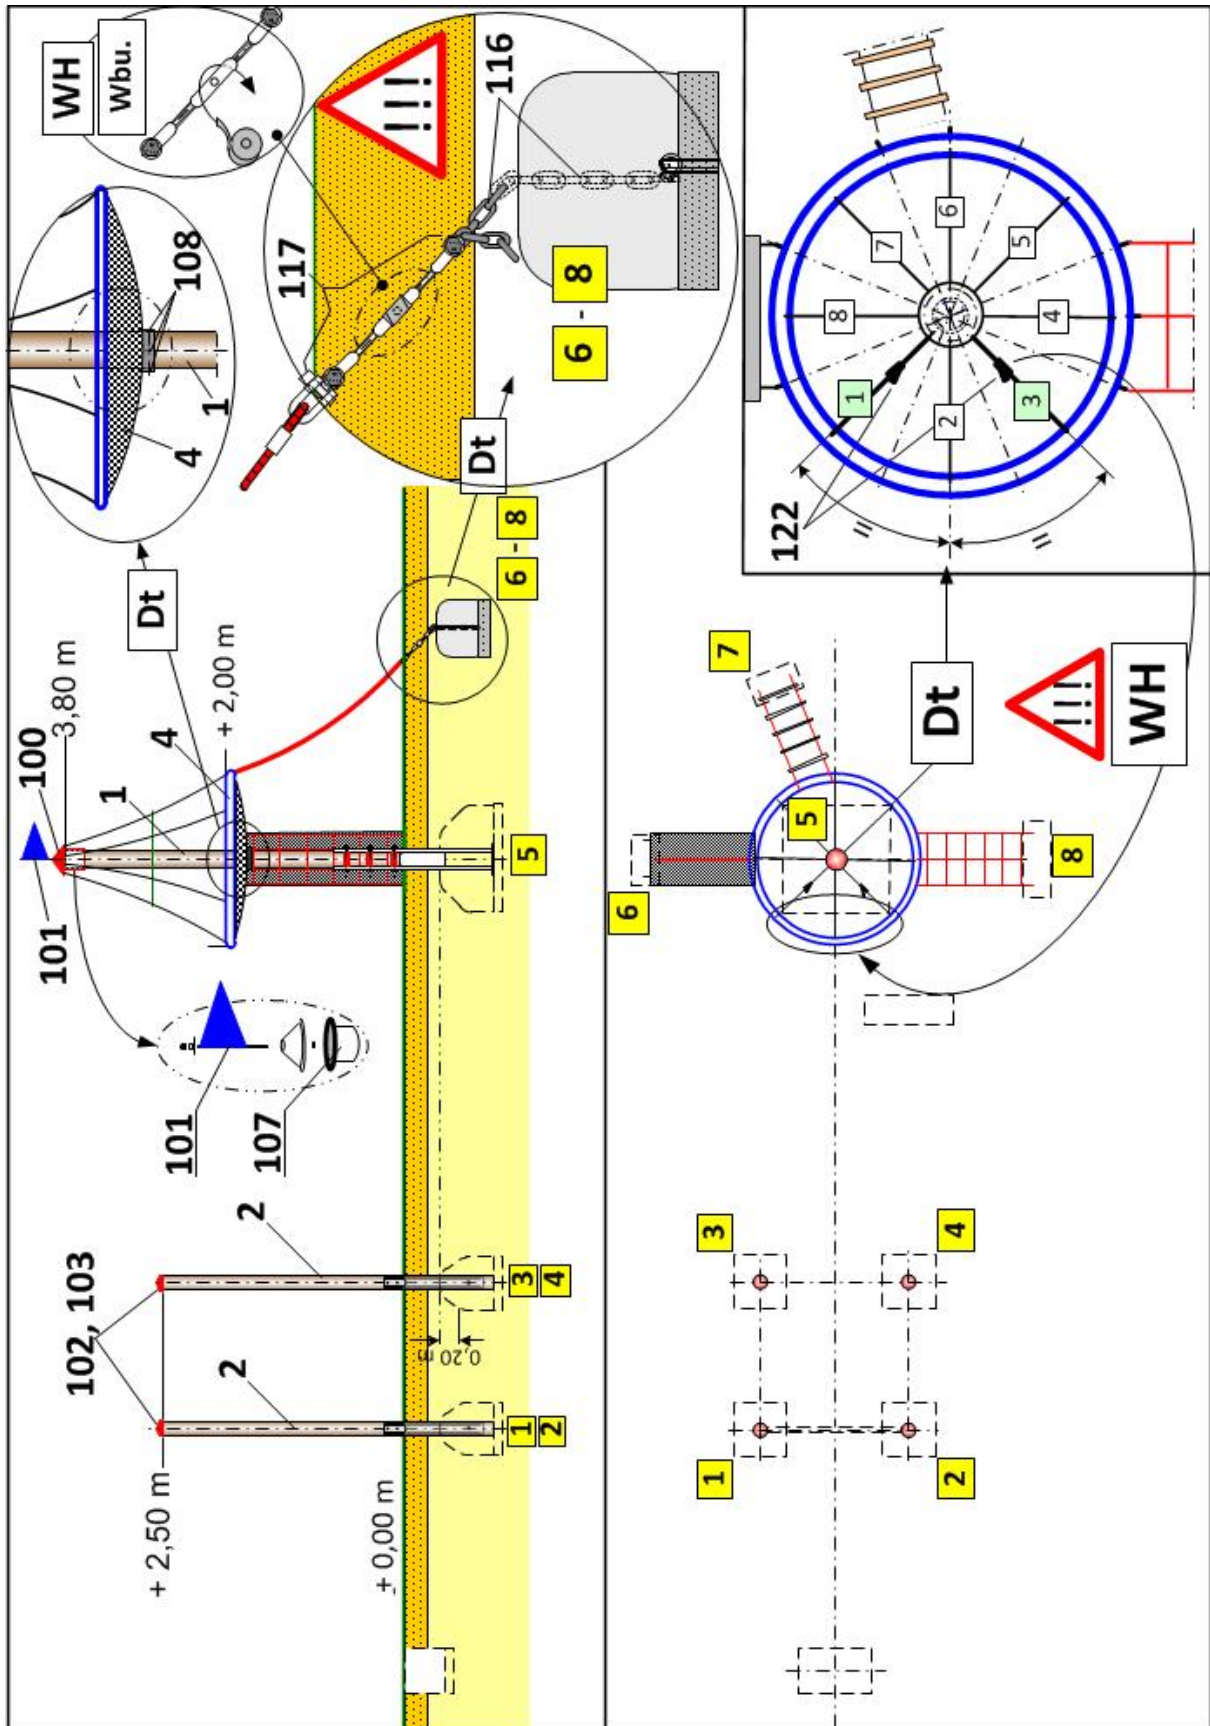

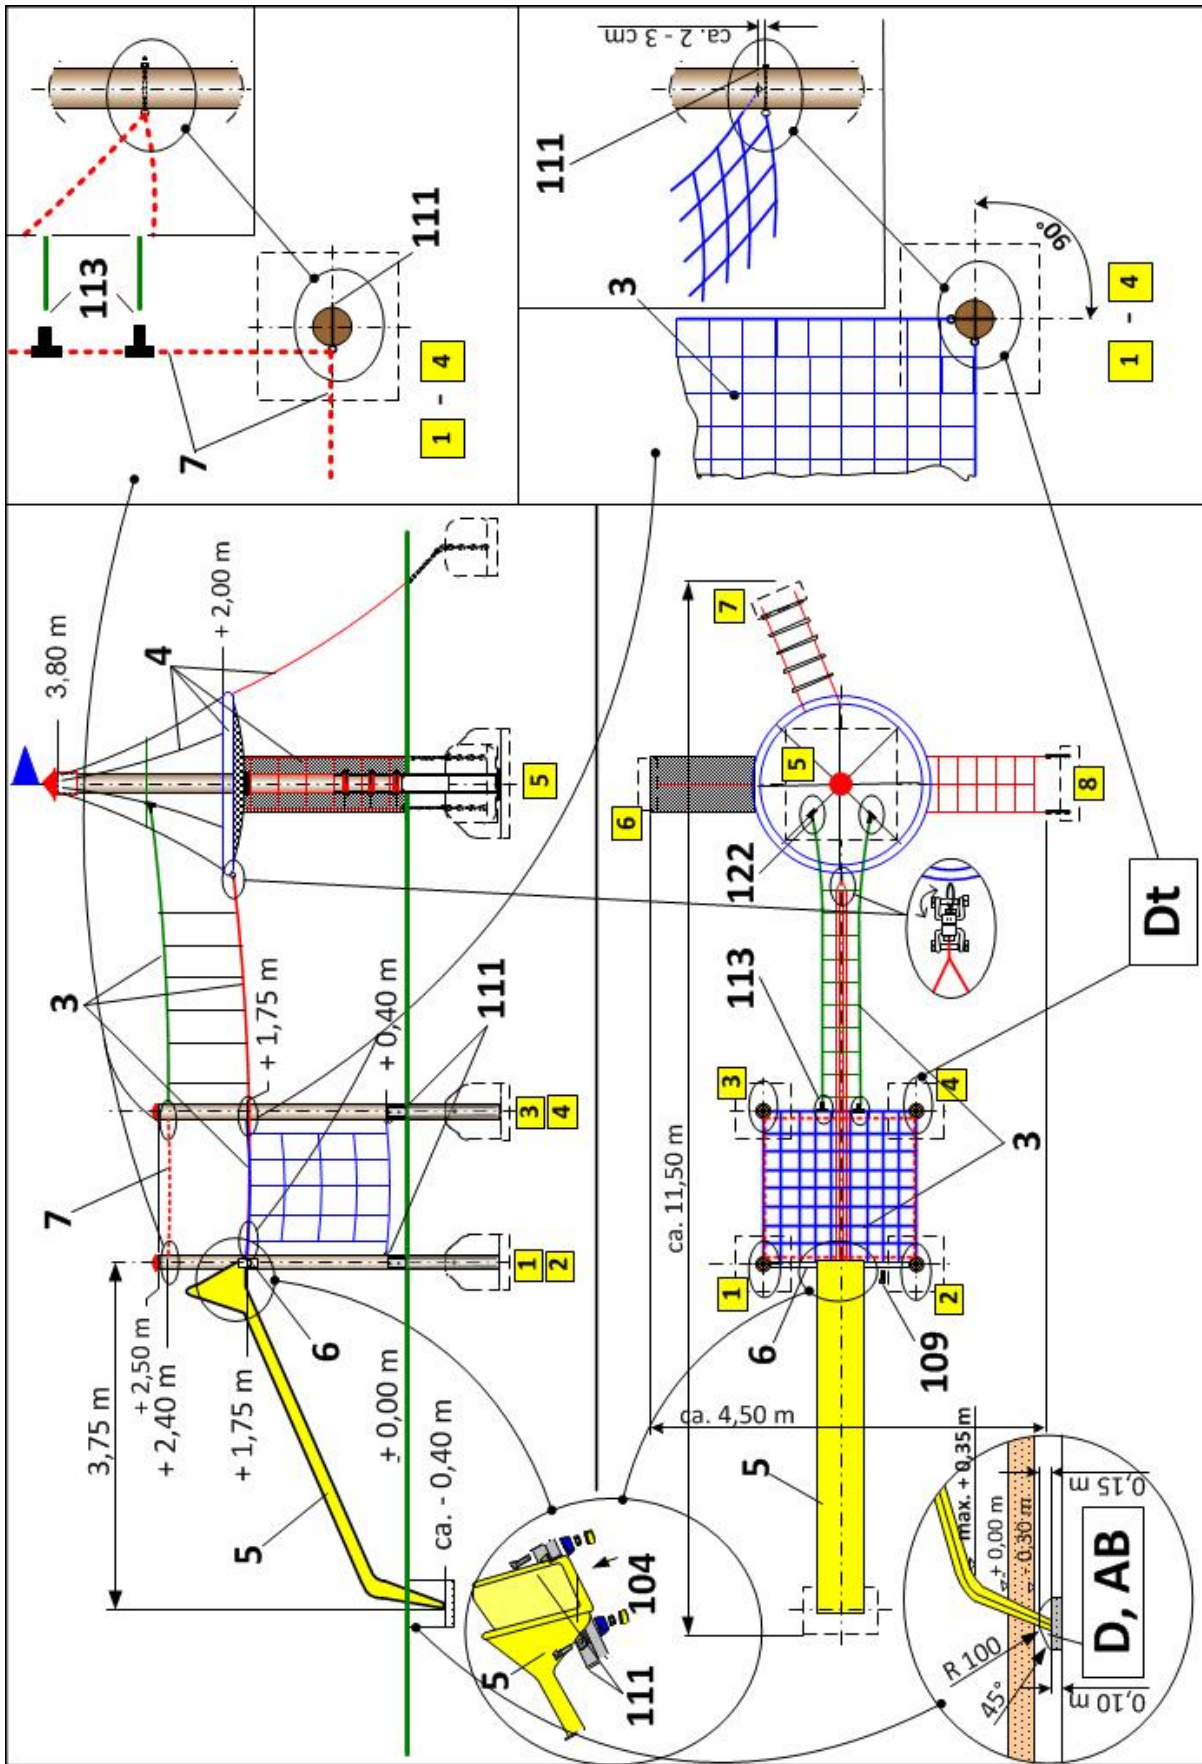


	Version: Little Eagles Nest-Prairie 4 x Oak/1 x Douglas Fir Posts
PS	Space required incl. safety zone
AB	Setting time at least 7 - 8 days
a.Einb.	Concrete in anker chains
B	Steel rod for fixation of anker chains
Dt	Detail view
de	Disassemble
D	Concrete C25/30 (for foundations)
G	Drainage
mo	Assemble
F	Fall protection
O.K	Upper edge of playing level
VB	Pre-drill
m	minimum
LM	Clear measurments between posts
Wbu.	Seal holes on turnbuckles with tape
FR	Round off foundation edges
WH	Important notice
SSL	Installment directions of post brackets
 Attention!	<p>Round off foundation edges (min.R = 100 mm)! Sizes of foundations are designed for soils class “4-5” (natural ground).</p> <p>Soil class 4: soft to medium plasticity, interleave bound, with minor portion of stone (portion < 30% with bigger diameter of 63 mm grain size).</p> <p>Soil class 5 : ground with soil class 3 and 4 with big portion of stones (portion > 30% with bigger diameter of 63 mm grain size).</p> <p>In case of sandy and soft soils, the surface measure of foundations have to be enlarged for about 50%!</p>

See drawings for details of shortcuts

5 Post installation checks



Notice

If the equipment has not been installed safely, you must ensure that the public is prevented from using it.

5.1 Marking filler depth

- Labelling the posts to show the depth of material provided as fall protection (i.e. loose filler).

5.2 The equipment has not been installed safely in the following cases:

- Installation of equipment is not complete.
- The protective surface has not been installed yet.
- Appropriate maintenance work cannot guarantee operational safety.

5.3 Removal of all assembly aids

- Please make sure that all assembly aids have been removed from the playing area. The equipment must not be approved for use until this check has been carried out.

5.4 Information about inspection of the equipment before it is used for the first time

- There are no special inspection requirements to be met before the equipment is used for the first time.

5.5 Retighten bolts

- After one week of play, please retighten all bolts again. Later upon respective maintenance.

B Maintenance Instructions Little Eagles Nest-Prairie Art. 4634-10



Revision history

Revision 1 – 2006-03.14

The first allowed version

Maintenance instructions JF

Revision 5 – 2011-02-18 C25/30 FH

Warungsanleitung

All rights reserved © Copyright 2010 Huck Seiltechnik GmbH

6 Introduction Maintenance

6.1 General informations

This equipment should be installed, inspected, maintained and operated in accordance with EN 1176-7 guidelines.



Please note: Providing any necessary repairs are carried out, a piece of play equipment that is inspected regularly cannot become so damaged that it is dangerous.

Any spare parts which may be required can be obtained directly from your supplier.



This equipment should only be assembled, maintained and repaired by **persons with the necessary expertise**.

A copy of the inspection record should be given to the operator, who must confirm receipt.

**This maintenance instruction is based on the standard
“EN 1176-1:2008”.**

7 General maintenance information

7.1 Maintenance intervals

Maintenance intervals are based on average use. Please note that more frequent inspections and/or maintenance are required if the play equipment is subject to intensive use.

7.2 Inspection frequency

The frequency of inspections must be based on actual use. Factors that affect frequency include vandalism, location (e.g. coastal proximity), air pollution and the age of the equipment.

7.3 Maintenance products and procedures

All nuts and bolts are hot-dip galvanised or stainless steel. One of the characteristics of stainless steel is that uncontrolled cold welding may occur when the nuts are tightened. To prevent this, it is necessary to spray the nuts and bolts with Teflon spray or another similar lubricant.

7.4 Spare parts

All spare parts must conform to the manufacturer's specifications.

7.5 Identifying spare parts

All spare parts are listed in the parts list. The parts list follows the installation requirements.

7.6 Special instructions for the disposal of individual equipment components

No special instructions are necessary.

7.7 Special measures during the break-in period

No later than 2 weeks after assembly, all screwed connections should be checked and tightened if necessary.

7.8 Maintenance of protective surfaces

Surfaces providing fall protection must also be maintained regularly. It is particularly important to maintain the correct level of loose surface material and add more if necessary.

7.9 Faults



Damages must be repaired as soon as they are detected. If serious defects that affect the safety cannot be repaired straight away, the playground item must be blocked with immediate effect.

7.10 Loose screws



Loose screws always cause quality problems and put safety at risk. Therefore, loose screws should always be tightened and checks carried out to ensure that there are no missing screws.

7.11 Preventing equipment use

Use of the equipment should be prevented in the event of incomplete installation, disassembly, maintenance, repairs and faults.

7.12 Claims/liability for faults (steel poles)

Steel posts and footings are covered by our guarantee if regular maintenance is carried out and recorded in writing.

Our general terms and conditions apply. Maintenance of steel poles first takes place after 3 years. The steel posts must be excavated down to the concrete foundations and checked for corrosion.

Zinc paint should be applied to any corroded areas and scratches.

Check ropes for abrasion, replace ropes where coating is damaged down the Steel inlet.

8 Maintenance Timetable

8.1 Special advices

8.1.1 Maintenance interval

We strongly advise you to carry out inspections and maintenance work within the specified periods as use of the equipment, the weather and malicious vandalism cause wear and tear that compromises the safety and function of the equipment.

8.1.2 Maintenance intervals in the event of intensive use

Please note that more frequent inspections and/or maintenance are required if the play equipment is subject to intensive use.

8.1.3 Faults that compromise safety



In the event of a fault that compromises safety, quick action must be taken. This may involve repairing it immediately or shutting down and dismantling the equipment.

8.1.4 Faults that compromise function



Faults that compromise function should also be repaired immediately. Such faults lower the value of the equipment to the user and encourage malicious vandalism, which may render the equipment less safe. Any damage should also be repaired immediately.

9 Monthly maintenance

- 9.1 Check the spaces between the equipment and the ground (clearance and height of fall).**
- 9.2 Check the ground surface of fall protection for hard objects and loose foundations.**
- 9.3 Check all connecting elements and fittings for wear and tear and tighten if necessary. Replace damaged or missing parts.**
- 9.4 Check that moving metal parts (joints, springs, etc.) move smoothly and are not worn. Replace if necessary. It is not necessary to lubricate joints as we only use maintenance-free metal roller bearings.**
- 9.5 Check all attachments such as chains, ropes, nets, etc. for damage and replace if necessary.**
- 9.6 Check rubber parts, sleeves, etc. for wear and tear or damage and replace if necessary.**
- 9.7 If necessary, remove excess padding material from the post footings due to danger of rotting.**
- 9.8 Check the surface of wooden parts for damage caused by the weather or external influences and mould. Repair or replace if necessary.**
- 9.9 Check the surface of plastic and metal parts, e.g. slides, for damage and replace if necessary.**

10 Quarterly maintenance

- 10.1 Detailed inspection of the operation and stability of the equipment paying particular attention to any wear and tear.**
- 10.2 Tighten all forms of attachment.**
- 10.3 Repaint and retreat surfaces.**
- 10.4 Maintenance of fall protection surfaces.**
- 10.5 Lubrication of joints.**
- 10.6 Check height of fall protection material and top up with loose filler if necessary. If the posts are labelled, top up to the mark.**
- 10.7 Retighten all bolts.**

11 Half yearly maintenance

- 11.1 The stability of supporting posts, supports, foundations etc. has to be checked. The safety level of the entire system has to be checked after**

repairs have been carried out or additional system components have been installed or replaced.



Attention

Annual Maintenance

12 Annual maintenance

- 12.1 Ascertaining that the equipment, foundations and surfaces are safe for operation.
- 12.2 In particular, the equipment should be checked for decay and corrosion. It may be necessary to dig out or excavate certain components in order to do so. Zinc paint should be applied to corroded areas and scratches.



Attention

The equipment must be inspected by someone **with the necessary expertise** in strict compliance with the instructions issued by Huck Seiltechnik GmbH.

A copy of the inspection record should be given to the operator, who must confirm receipt.

13 Maintenance printout

Name of item: Little Eagles Nest-Prairie _____ / Art. No. 4634-10 _____

Location: _____

Customer or operator: _____
 (City, Town or Parish Council, School)

Date of inspection	Inspector	O.K.	Accessible	Barriered	Defects	Repaired by	Date

Please copy and return once a year after main inspection has been carried out to the manufacturer by Telefax +49(0)6443/ 83 11 79!
Place the confirmation form in the play equipment files.

14 Hand over document



After the installation of the equipment pass the installation and maintenance documents to the operator. The operator has to receive the hand over documents. The complete filled and signed hand over document should be sent to the supplier.

Art.-No.: 4634-10

Type of item: Little Eagles Nest-Prairie

Serial number: _____

Customer or operator (City, Town or Parish Council, School, etc.):

Competent person in charge:

Installation Company (address):

Responsible assistant (assembler):

Received the complete assembly instructions, maintenance instructions and maintenance printout.

(Signature of operator)
(Stamp)

(Signature of Installation Company)

Date: _____