

---

**A Assembly instructions**  
**Mini Cheops Pyramid**  
**Art. 4643-1B**  
**to set into concrete**



**Revision history**

Revision 0 – 2005-09-05

The first allowed version

Assembly instructions

Revision 4 – 2012-04-27

Ankerplatte FH

All rights reserved

© Copyright 2003 Huck Seiltechnik GmbH

## Contents

<b>A</b>	<b>Assembly instruction Mini Cheops Pyramid, Art. 4643-1B</b> .....	<b>1</b>
<b>1</b>	<b>Introduction Assembling</b> .....	<b>4</b>
<b>2</b>	<b>Datasheet Mini Cheops Pyramid, Art. 4643-1B</b> .....	<b>5</b>
<b>3</b>	<b>Delivery contents (parts list with part numbers)</b> .....	<b>8</b>
<b>4</b>	<b>Erection instructions</b> .....	<b>12</b>
<b>5</b>	<b>Post installation checks</b> .....	<b>20</b>
<b>B</b>	<b>Maintenance instructions Mini Cheops Pyramid, Art. 4643-1B</b> .....	<b>21</b>
<b>6</b>	<b>Introduction Maintenance</b> .....	<b>23</b>
<b>7</b>	<b>General maintenance information</b> .....	<b>24</b>
<b>8</b>	<b>Specific maintenance advice</b> .....	<b>25</b>
<b>9</b>	<b>Maintenance timetable</b> .....	<b>26</b>
<b>10</b>	<b>Monthly maintenance</b> .....	<b>27</b>
<b>11</b>	<b>Quarterly maintenance</b> .....	<b>27</b>
<b>12</b>	<b>Annual maintenance</b> .....	<b>28</b>
<b>13</b>	<b>Maintenance printout</b> .....	<b>29</b>
<b>14</b>	<b>Hand over document</b> .....	<b>31</b>

## List of Tables

Table 3-1: Delivery contents, in words .....	8
Table 3-2: Delivery contents, in symbols .....	9

---

## 1 Introduction Assembling

### 1.1 General information

This equipment should be installed, inspected, maintained and operated in accordance with EN1176-7 guidelines.

**Before installation work commences, please check that you have all of the equipment and fixation components in the parts list provided (see Tables 3-1 and 3-2).**

**Please consider that the installation has to be carried out only on even terrain (max.slope up to 3%).**

Any spare parts that may be required can be obtained directly from your supplier.



**Attention**

Following installation, complete assembly instructions, maintenance instructions and a maintenance record must be sent to the operator who must confirm receipt in writing. See the last page of this document.



**Attention**

All nuts and bolts are hot-dip galvanised or stainless steel.

One of the characteristics of stainless steel is that uncontrolled cold welding may occur when the nuts are tightened. To prevent this, it is necessary to spray the nuts and bolts with Teflon spray or another similar lubricant.

---

**We hereby confirm that this play equipment has been tested and certified in accordance with the play equipment standard EN 1176.**

## 2 Datasheet: Mini Cheops Pyramid, Art. 4643-1B

1. Space requirement:  $\varnothing$  4.00 m and/or  $\varnothing$  6.40 m including safety zone, height of fall 1.20 m
2. Required safety surface:

Surface material	Description mm	Minimum thickness of layer mm	Maximum height of fall mm
Topsoil grass			$\leq$ 1000*
Chipped bark	20 – 80 grain size	300/400	$\leq$ 2000/3000
Wood chippings	5 – 30 grain size	300/400	$\leq$ 2000/3000
Sand	0.2 – 2 grain size	300/400	$\leq$ 2000/3000
Gravel	2 – 8 grain size	300/400	$\leq$ 2000/3000
Other ground materials	As recommended by manufacturer		

3. Name and overall dimension of the largest component:  
Steel post, length 4.00 m,  $\varnothing$  102 mm
4. Name and weight of the heaviest component:  
Steel posts (1 pallett), approx. 35 kg
5. Intended age group: 6 years and over
6. **Please note that this equipment is set in concrete.**

Round off edges of concrete foundations!

Important – All sizes of foundations are valid for soil class 3 – 4 (standard soil). In case of sandy and soft soil we strictly recommend to enlarge the foundation dimensions.

Concrete: C25/30

Required concrete: approx. 4.5 m<sup>3</sup>

Foundations/area to be excavated:

1 x 0.80 m x 0.80 m x 0.50 (height)

total depth 0.80 m including 10 cm drainage

1 x 1 x circular foundations,

external  $\varnothing$  5.15 m x 0.60 m wide x 0.50 m high

Total depth: 0.90 m incl. 10 cm drainage layer

Top edge of concrete 30 cm below ground level



**Attention! Round off foundation edges (min.R = 100 mm)! Sizes of foundations are "4-5" (natural ground).**

**Soil class 4: soft to medium plasticity, interleave bound, with minor portion of stone (portion < 30% with bigger diameter of 63 mm grain size)**

**Soil class 5 : ground with soil class 3 and 4 with big portion of stones (portion > 30% with bigger diameter of 63 mm grain size)**

**In case of sandy and soft soils, the surface measure of foundations have to be enlarged for about 50%!**

7. Assembly time, once foundations complete: approx. 2 hours.  
Required assistance: 2 people.
8. Any spare parts which may be required can be obtained directly from your supplier
9. **We hereby confirm that this item of play equipment has been tested and certified in accordance with the play equipment standard EN 1176.**

## **Drawings / Views**

All optical drawings are showing only the measurements/dimensions and are no mandatory technical views of the complete item.

We reserve the right to change technical details of our articles which are serving for the further development of our articles and are reasonable for the customer.

## **Measurement tolerances**

Because of the properties and characteristics of the components, minor measurement tolerances compared to the indication on the sketches are possible.

This concerns all shown measurements except the foundation measurements resp. measurements below upper edge ground level/play area.

### 3 Delivery contents (parts list with part numbers)

#### 3.1 In words


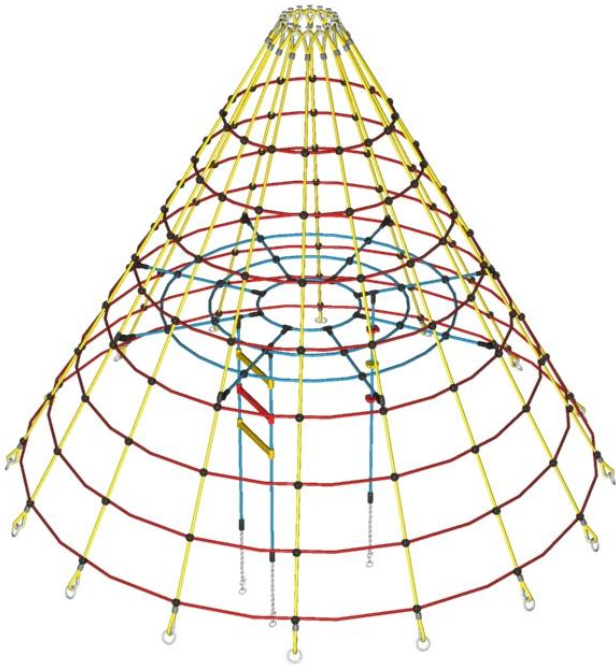



Table 3-1: Delivery contents, in words




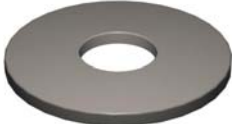
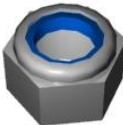




Pos.	Quantity	Element / Description	Size	O.K.	Missing
1	1	Steel post, galvanised	Ø 102 mm; 4.00 m long		
2	1	Play element (netting completely preassembled)			
3	1	Post footing, 16 bores	Ø 360 mm, galvanised		
100	16	Hexagon bolts	M10 x 20, galvanised		
101	16	Tooth lock washers	M10, galvanised		
102	1	Threaded rod	M16 x 165 mm, galvanised		
103	1	Hexagon nut	M16, galvanised		
104	1	Red cover	Ø 375 mm, 140 mm high		
105	1	Washer	17, DIN 9021, VA		
106	1	Stop nut	M16, VA		
107	1	Black cap	For M16		
108	16	Turnbuckles	M12, galvanised		
109	16	10 mm chains	Approx. 1.20 m long		
110	16	Welded shackles (for ground pins)	10 mm, galvanised		
111	16	Ground pins	600 mm long, galvanised		
112	3	Screw-in ground anchors	400 mm long, galvanised		
113	2	Loctite			
114	1	anchor plate	500 x 500 mm		
	1	<b>Drainpipe (to be provided by customer)</b>	<b>Approx. Ø 150 x 500 mm long</b>		







### 3.2 In symbols



Table 3-2: Delivery contents, in symbols


Pos.	Quantity	Symbol
1	1	 <p>Ø 102 mm; 4,00 m lg.</p>
2	1	
3	1	 <p>Ø 360 mm galvanised</p>
100	16	 <p>M10 x 20 galvanised</p>
101	16	

Pos.	Quantity	Symbol
		M10 galvanised
102	1	 <p>M16 x 165 mm galvanised</p>
103	1	 <p>M16 galvanised</p>
104	1	 <p>Ø 375 mm, 140 mm h.</p>
105	1	 <p>17 DIN 9021 VA</p>
106	1	 <p>M16 VA</p>
107	1	 <p>für M16</p>
108	16	 <p>M12 galvanised</p>
109	16	 <p>ca. 1,20 m long</p>
110	16	 <p>10er galvanised</p>


Pos.	Quantity	Symbol
111	16	 600 mm long galvanized
112	3	 400 mm long galvanized
113	2	 Loctite (bolt lock) je 3 ml
114	1	 anchor plate 500 x 500 mm

## 4 Erection Instructions

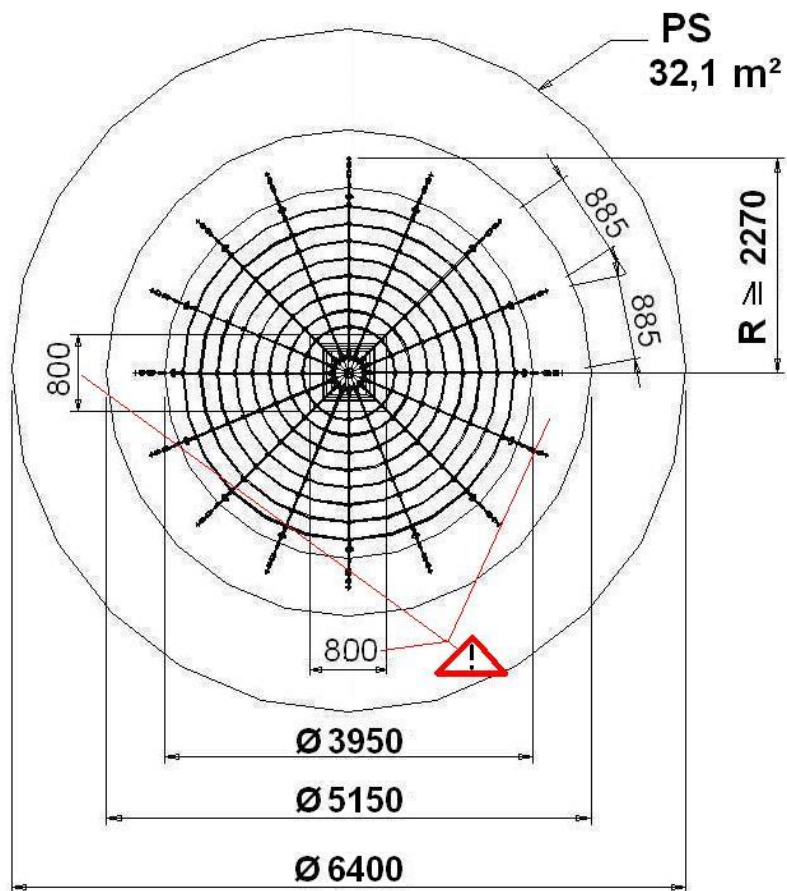
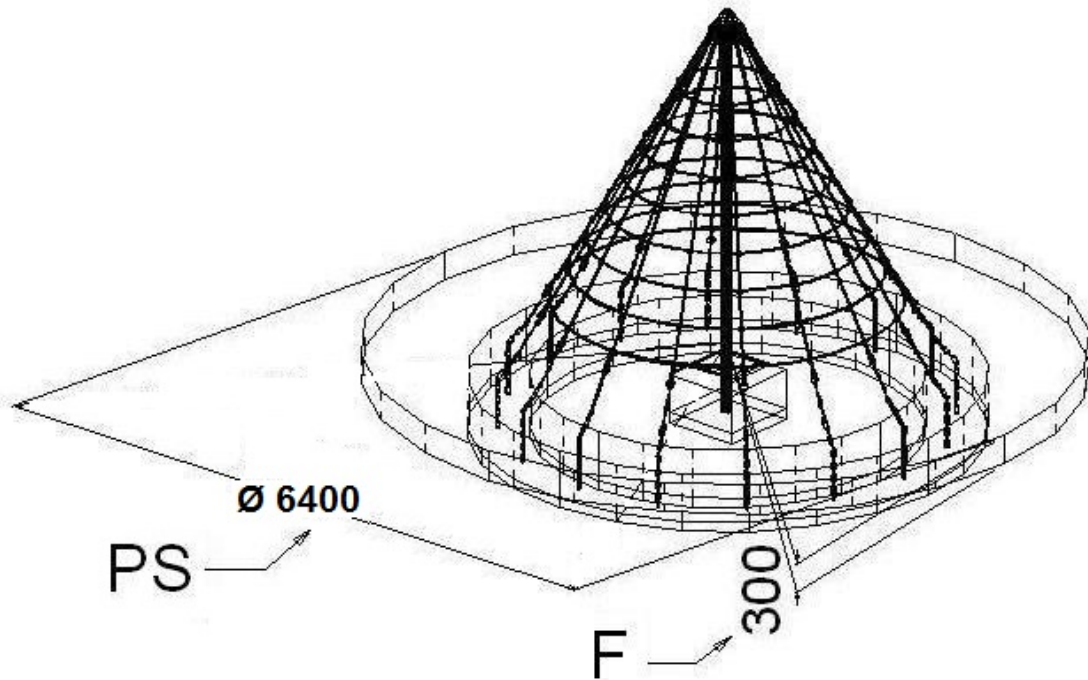



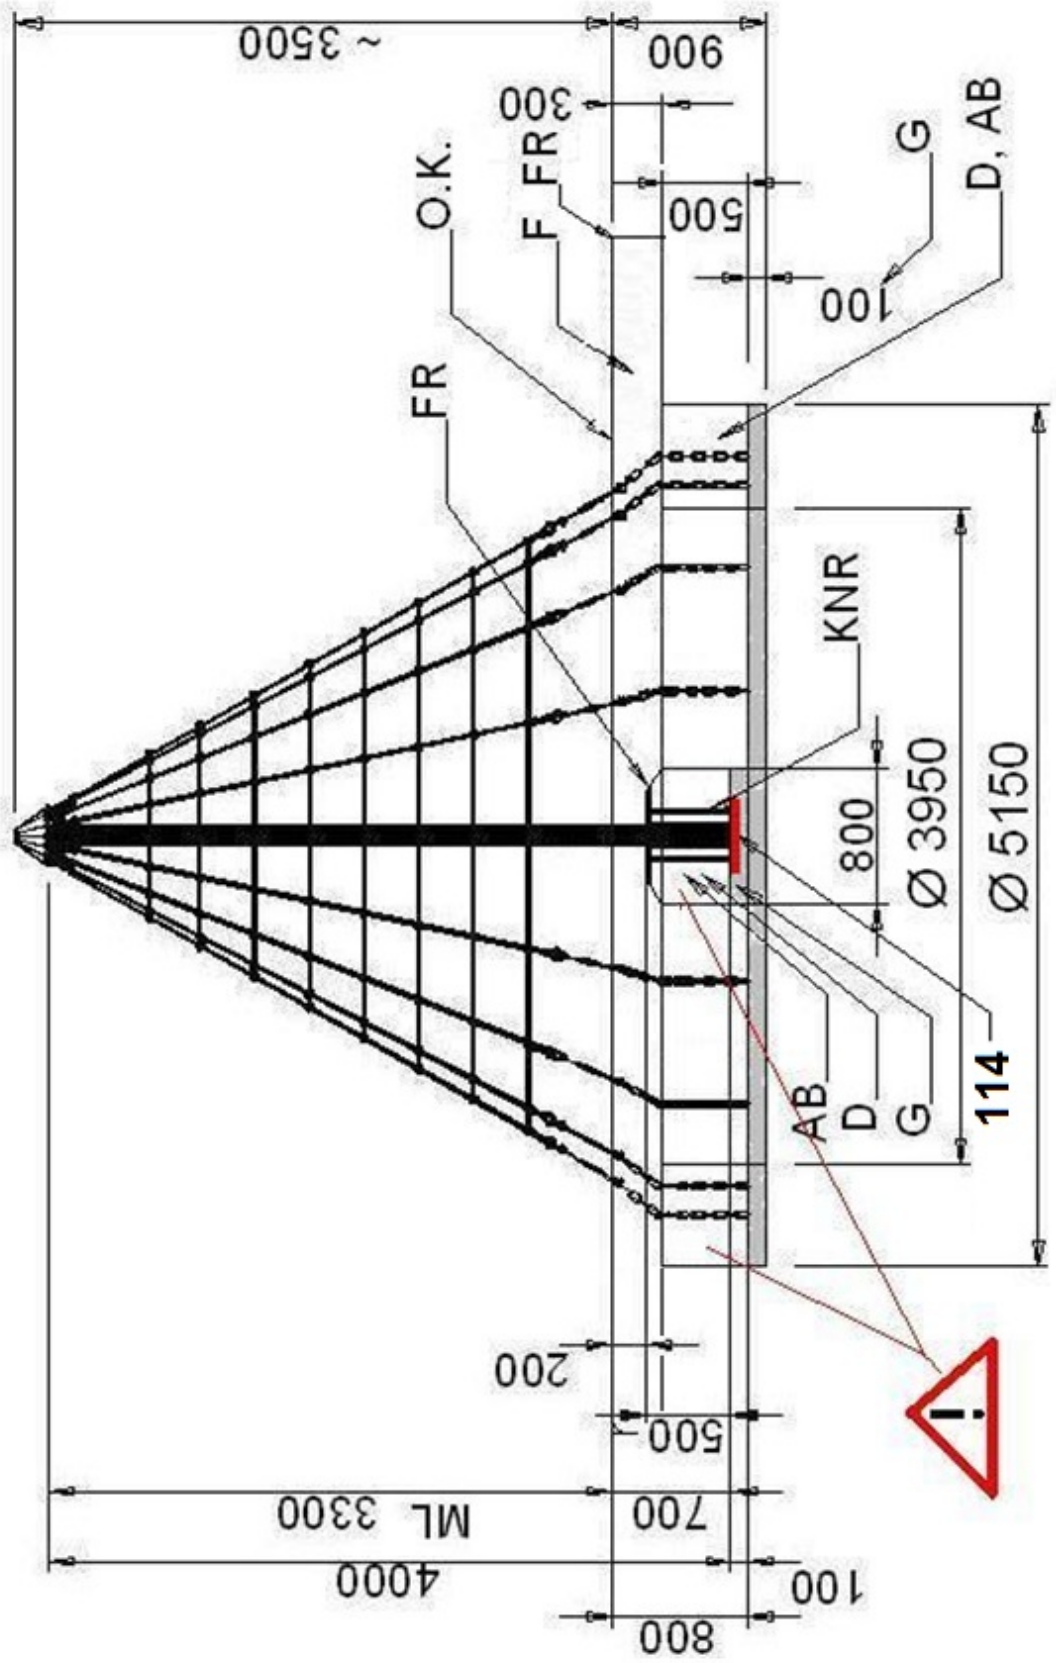


# Screw locking device !

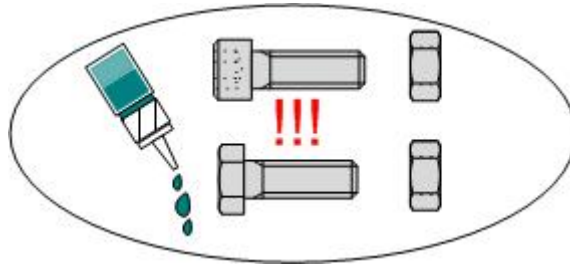




**glue all screws, nuts and sleeves with loctite.  
(not less than 5 drops !)  
(except for lock nut)**

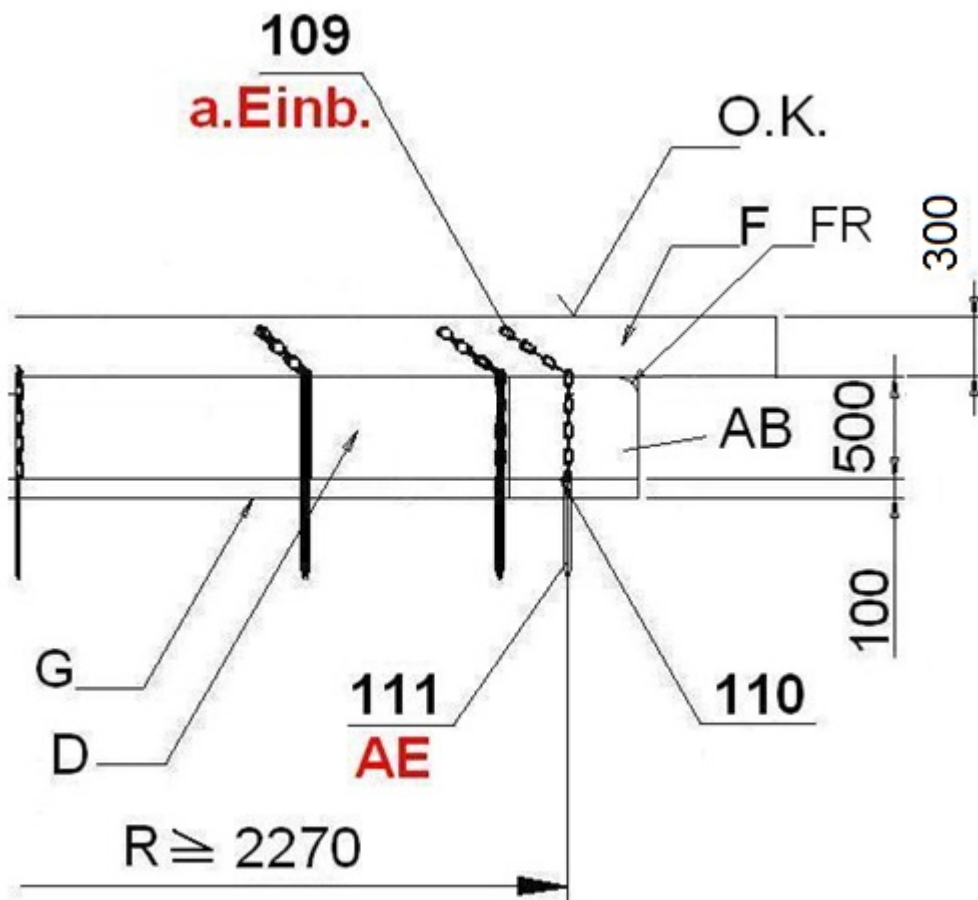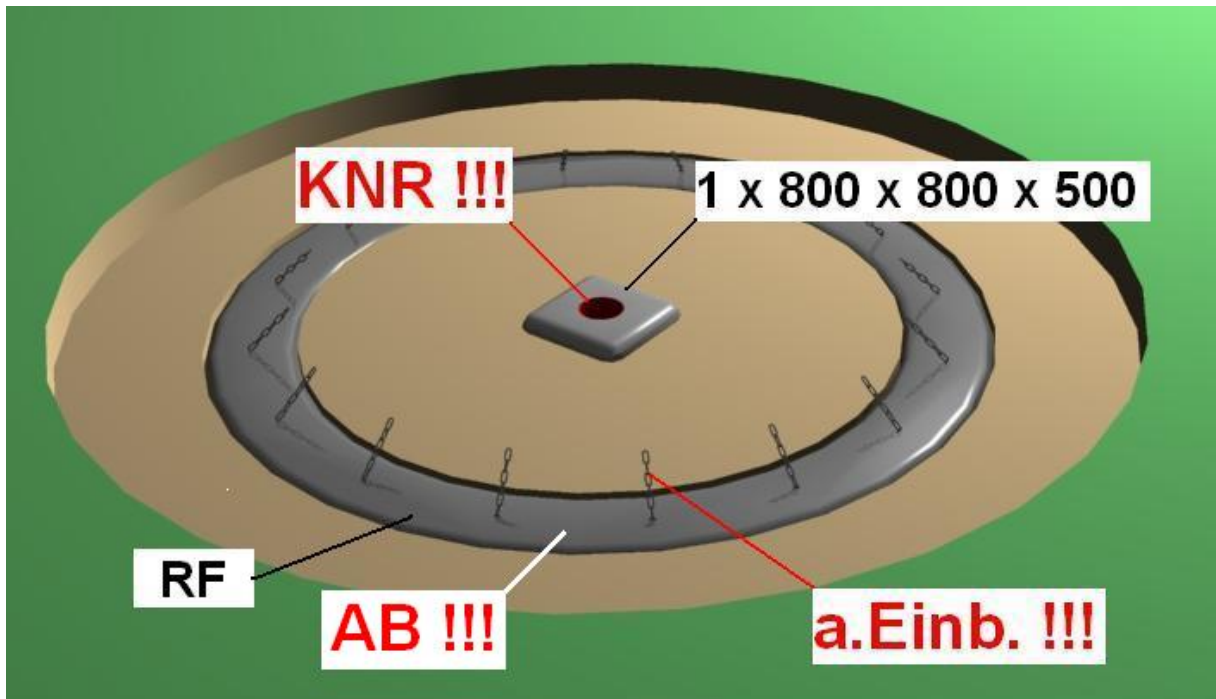

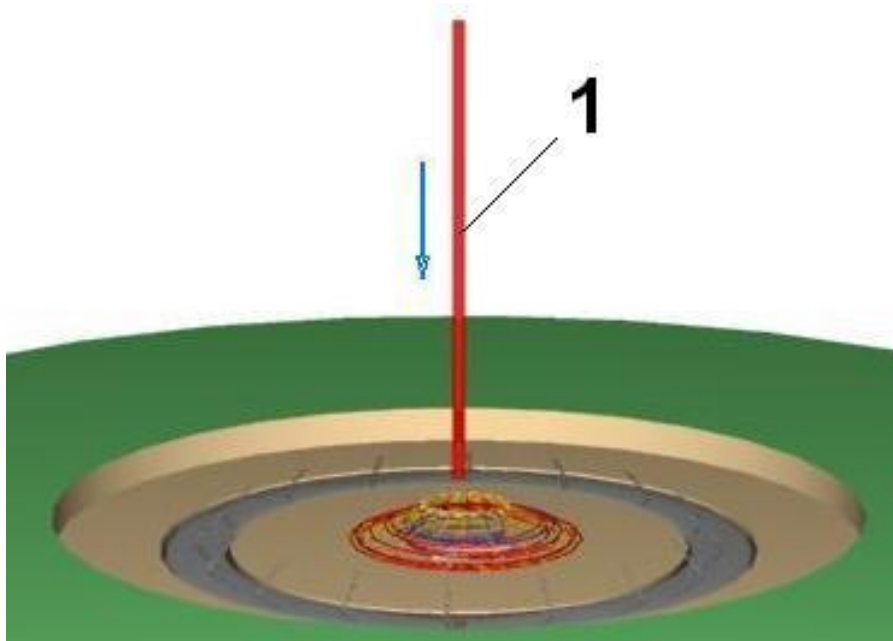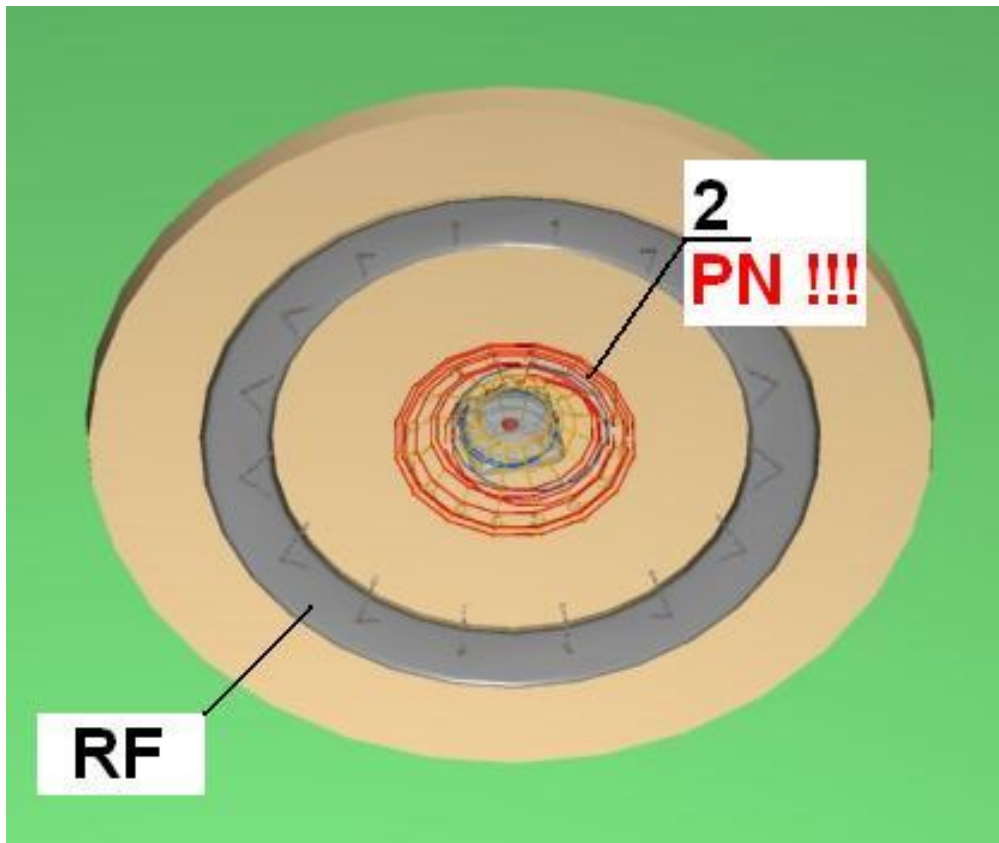



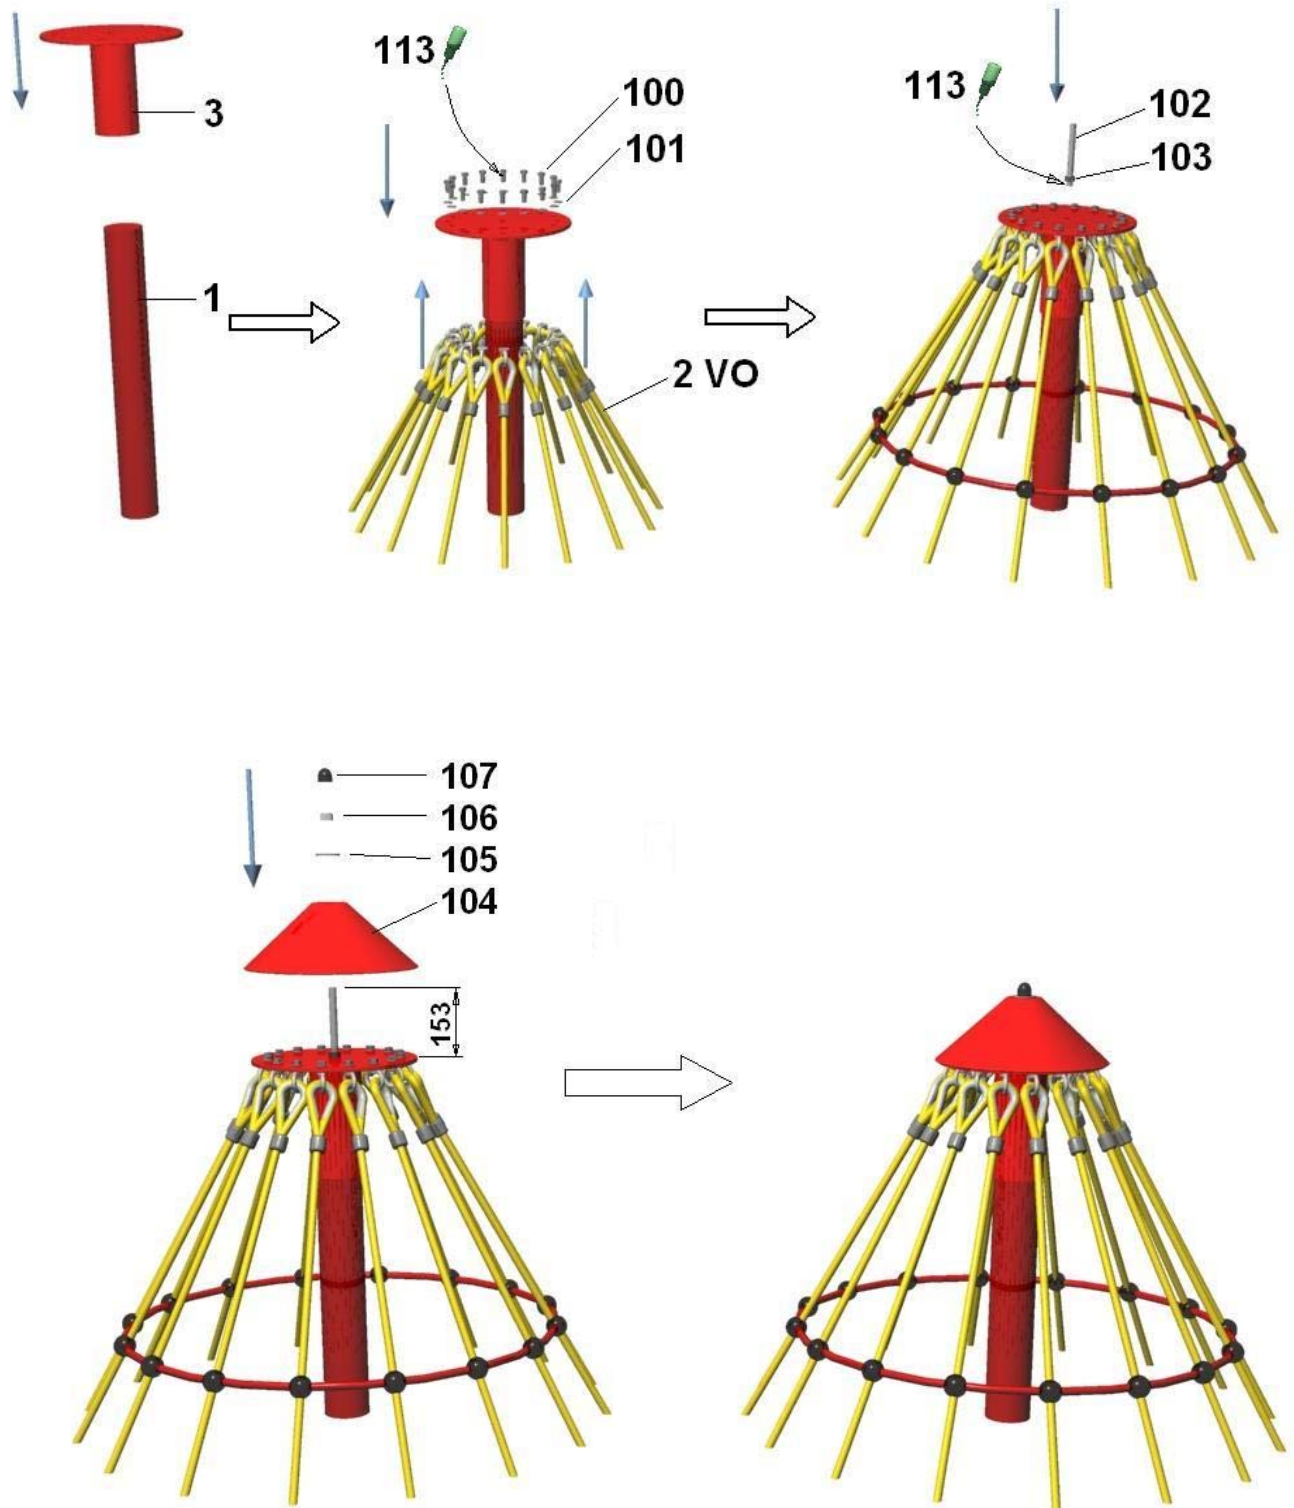

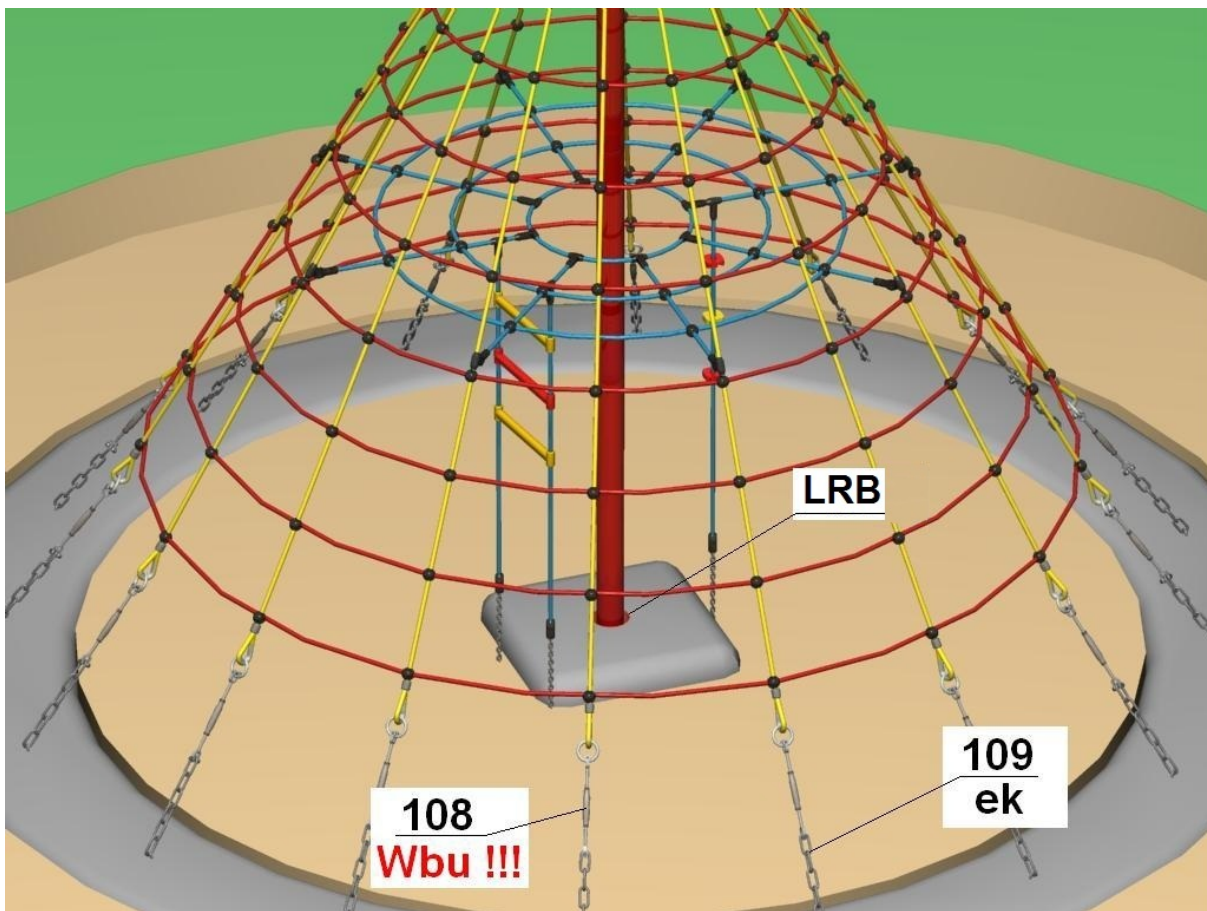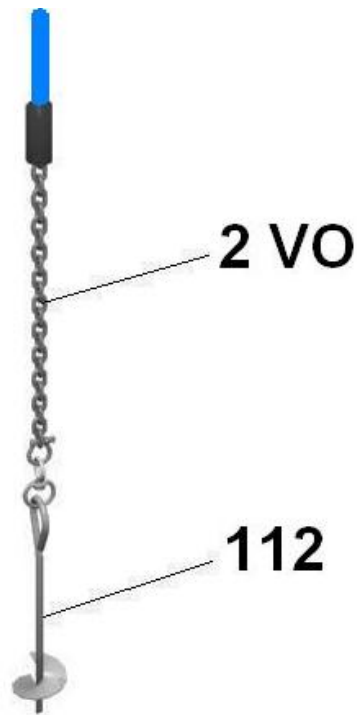


	Version: Mini Cheops Pyramid
<b>AB</b>	Setting time of at least 7-8 days
<b>AE</b>	Anchor chains are secured in the ground with ground pins.
<b>a.Einb.</b>	Chain set in concrete in the foundations
<b>D</b>	C25/30 concrete (for foundations) Concrete required: 4.5 m <sup>3</sup>
<b>ek</b>	Chains may need to be shortened during assembly.
<b>F</b>	Fall protection
<b>FR</b>	Radius of foundations at least 10 cm
<b>Gew.pl.</b>	Decking slab supplied by the customer
<b>G</b>	Drainage layer
<b>KNR</b>	Pipe (e.g. concrete or PVC drainpipe) Ø 150 mm, 0.50 m long, <b>to be supplied by the customer</b>
<b>LRB</b>	Fill space between pipe and steel post with liquid concrete.
<b>ML</b>	Post height above playing level
<b>O.K.</b>	Upper edge of playing level
<b>PN</b>	<b>Place the netting over the pipe with the underside on the foundations.</b>
<b>PS</b>	Space requirement including safety zone ~32,1 m <sup>2</sup>
<b>R</b>	Radius
<b>RF</b>	Circular foundations
<b>VO</b>	Preassembled
<b>Wbu.</b>	<b>After tightening and before installing the fall protection, plug the bores in the threaded sleeve of the turnbuckles on site.</b>
	<p>Round off foundation edges (min.R = 100 mm)! Sizes of foundations are "4-5" (natural ground).              Soil class 4: soft to medium plasticity, interleave bound, with minor portion of stone (portion &lt; 30% with bigger diameter of 63 mm grain size)              Soil class 5 : ground with soil class 3 and 4 with big portion of stones              (portion &gt; 30% with bigger diameter of 63 mm grain size)              In case of sandy and soft soils, the surface measure of foundations have to be enlarged for about 50%!</p>

See drawings

---

## 5 Post installation checks

---



If the equipment has not been installed safely, you must ensure that the public is prevented from using it.

---

### 5.1 Marking filler depth

- Labelling the posts to show the depth of material provided as fall protection (i.e. loose filler).

### 5.2 The equipment has not been installed safely in the following cases:

- Safe equipment installation is not complete.
- The protective surface has not been installed yet.
- Appropriate maintenance work cannot guarantee operational safety.

### 5.3 Removal of all assembly aids

- Please make sure that all assembly aids have been removed from the playing area. The equipment must not be approved for use until this check has been made.

### 5.4 Information about inspection of the equipment before it is used for the first time

- There are no special inspection requirements to be met before the equipment is used for the first time.

### 5.5 Retighten bolts

- After one week of play, please retighten all bolts again. Later upon respective maintenance.

**B Maintenance instructions  
Mini Cheops Pyramid  
Art. 4643-1B  
to set into concrete**



**Revision history**

Revision 0 – 2005-09-05

The first allowed version

Maintenance instructions

Revision 4 – 2012-04-27

Ankerplate FH

All rights reserved

© Copyright 2003 Huck Seiltechnik GmbH

---

## 6 Introduction Maintenance

### 6.1 General informations

This equipment should be installed, inspected, maintained and operated in accordance with EN 1176-7 guidelines.



**Please note:** Providing any necessary repairs are carried out, a piece of play equipment that is inspected regularly cannot become so damaged that it is dangerous.

---

Any spare parts which may be required can be obtained directly from your supplier.



This equipment should only be assembled, maintained and repaired by **persons with the necessary expertise**.  
**A copy of the inspection record should be given to the operator, who must confirm receipt.**

---

**This maintenance instruction is based on the standard  
“EN 1176-1:2008”.**

## **7 General maintenance information**

### **7.1 Maintenance intervals**

Maintenance intervals are based on average use. Please note that more frequent inspections and/or maintenance are required if the play equipment is subject to intensive use.

### **7.2 Inspection frequency**

The frequency of inspections must be based on actual use. Factors that affect frequency include vandalism, location (e.g. coastal proximity), air pollution and the age of the equipment.

### **7.3 Maintenance products and procedures**

All nuts and bolts are hot-dip galvanised or stainless steel. One of the characteristics of stainless steel is that uncontrolled cold welding may occur when the nuts are tightened. To prevent this, it is necessary to spray the nuts and bolts with Teflon spray or another similar lubricant.

### **7.4 Spare parts**

All spare parts must conform to the manufacturer's specifications.

### **7.5 Identifying spare parts**

All spare parts are listed in the parts list. The parts list follows the installation requirements.

### **7.6 Special instructions for the disposal of individual equipment components**

No special instructions are necessary for the disposal of individual equipment components.

### **7.7 Special measures during the break-in period**

No later than 2 weeks after assembly, all screwed connections should be checked and tightened if necessary.

### **7.8 Drainage holes**

All drainage holes should be kept clear.

### **7.9 Maintenance of protective surfaces**

Surfaces providing fall protection must also be maintained regularly. It is particularly important to maintain the correct level of loose surface material and add more if necessary.



---

## 7.10 Faults

---



Faults must be repaired as soon as they are detected. If serious defects that compromise safety cannot be repaired straight away, the public must be prevented from using the equipment with immediate effect.

---

## 7.11 Loose screws

---



Loose screws always cause quality problems and put safety at risk. Therefore, loose screws should always be tightened and checks carried out to ensure that there are no missing screws (e.g. look out for holes you can see through).

---

## 7.12 Preventing equipment use

Use of the equipment should be prevented in the event of incomplete installation, disassembly, maintenance, repairs and faults.

## 7.13 Safeguarding the guarantee

Steel posts and footings are guaranteed if regular maintenance is carried out and recorded in writing. Maintenance first takes place after 3 years. The steel posts must be excavated as far as the concrete foundations and checked for corrosion. Zinc paint should be applied to any corroded areas and scratches.

## 8 Specific maintenance advice

None

## **9 Maintenance timetable**

### **9.1 Special advices**

#### **9.1.1 Maintenance interval**

We strongly advise you to carry out inspections and maintenance work within the specified periods as use of the equipment, the weather and malicious vandalism cause wear and tear that compromises the safety and function of the equipment.

#### **9.1.2 Maintenance intervals in the event of intensive use**

Please note that more frequent inspections and/or maintenance are required if the play equipment is subject to intensive use.

#### **9.1.3 Faults that compromise safety**

---



In the event of a fault that compromises safety, quick action must be taken. This may involve repairing it immediately or shutting down and dismantling the equipment.

---

#### **9.1.4 Faults that compromise function**

---



Faults that compromise function should also be repaired immediately. Such faults lower the value of the equipment to the user and encourage malicious vandalism, which may render the equipment less safe. Any damage should also be repaired immediately.

---

---

## 10 Monthly maintenance

- Check the spaces between the equipment and the ground (clearance and height of fall).
- Check the ground surface in the area with fall protection for hard objects and loose foundations.
- Check all connecting elements and fittings for wear and tear and tighten if necessary. Replace damaged or missing parts.
- Check that moving metal parts (joints, springs, etc.) move smoothly and are not worn. Replace if necessary. It is not necessary to lubricate joints as we only use maintenance-free metal roller bearings.
- Check all attachments such as chains, ropes, nets, etc. for damage and replace if necessary.
- Check rubber parts, sleeves, etc. for wear and tear or damage and replace if necessary.
- If necessary, remove excess padding material from the post footings due to danger of rotting.
- Check the surface of wooden parts for damage caused by the weather or external influences and mould. Repair or replace if necessary.
- Check the surface of plastic and metal parts, e.g. slides, for damage and replace if necessary.

## 11 Quarterly maintenance

- Detailed inspection of the operation and stability of the equipment paying particular attention to any wear and tear.
- Tighten all forms of attachment.
- Repaint and retreat surfaces.
- Maintenance of fall protection surfaces.
- Lubrication of joints.
- Check the height of the fall and top up with loose filler if necessary. If the posts are labelled, top up as far as the mark.
- Retighten all bolts



## Annual Maintenance

---

### 12 Annual maintenance

- Ascertaining that the equipment, foundations and surfaces are safe for operation.
- In particular, the equipment should be checked for decay and corrosion. It may be necessary to dig out or excavate certain components in order to do so. Zinc paint should be applied to corroded areas and scratches.
- Stability (check posts, bracing, foundations, etc.).
- Ascertaining whether there are any changes in equipment safety as a result of repairs that have been carried out or components that have been added or replaced.



The equipment must be inspected by someone **with the necessary expertise** in strict compliance with the instructions issued by Huck Seiltechnik GmbH.

**A copy of the inspection record should be given to the operator, who must confirm receipt.**

---

### 13 Maintenance printout

Name of item: Mini Cheops pyramid (registered design) / Art. No. 4643-1B \_\_\_\_\_

Location: \_\_\_\_\_

Customer or operator: \_\_\_\_\_

(Town Council, Local Authority, School)

Date of inspection	Inspector	O.K.	Accessible	Barriered	Defects	Repaired by	Date



---

## 14 Hand over document

---



After the installation of the equipment pass the installation and maintenance documents to the operator. The operator has to receive the hand over documents. The complete filled and signed hand over document should be sent to the supplier.

---

Art.-No.: 4643-1B

Type of item: Mini Cheops pyramid

Serial number:

**Customer or operator (Town Council, Local Authority, School, etc.):**

---

---

Competent person in charge:

---

---

**Installation Company (address):**

---

---

Responsible assistant (assembler):

---

---

Received the complete assembly instructions, maintenance instructions and maintenance printout.

---

(Signature of operator)  
(Stamp)

(Signature of Installation Company)

Date: \_\_\_\_\_

---